

**Truck Tents** 

110710, 110730, 110750, 110760, 110761, 110765, 110766, 110770

Set Up Video:



https://rightlinegear.com/supportfaqs/product-videos/

## **Set Up The Truck Tent**

1-Open the tailgate. Place the tent in your truck bed with the mesh window side facing up. Slip the tent over the tailgate and run the tailgate strap underneath.

**2-**Pull the tent forward so that it covers the entire truck bed (Fig 1). The front corners of the tent have split seams that go over the front corners of the bed (Fig 2).



 
## CAUTION: DO NOT USE EXCESSIVE FORCE WHEN TIGHTENING THE STRAPS.

**3-**Loosely attach the C straps to the bottom outside lip of the truck bed (Fig 3).




**4-**Open the door of the tent. Connect the orange strap's swivel clips to the truck bed's corner cleats (Fig 4 and Fig 5).






**5-**Tighten the orange straps so the inner flap seams run along the top outer edges of the bed rails (Fig 6 and Fig 7).

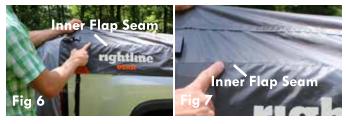


**6-**Attach the A and B straps to the bottom outside lip of the truck bed and tighten the A, B, and C straps (Fig 3).

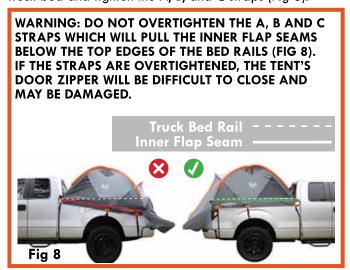

**7-**Tighten the tailgate strap (Fig 9). Place the tailgate side flaps behind the bumper (on most trucks) (Fig 10). Run the D straps over the A straps and attach them to the bottom outside lip of the truck bed (Fig 11).



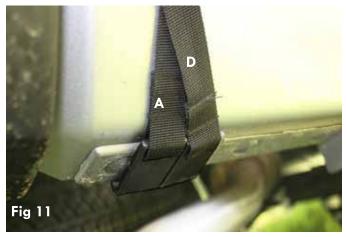

**8-**Run all (3) tent poles through their matching color pole sleeves (Fig 12). The (2) front poles are marked with orange tape and the rear pole is marked with gray tape (Fig 12 and Fig 13). The gray-marked pole should run under the (2) orange-marked poles (Fig 13).





CAUTION: DO NOT USE EXCESSIVE FORCE WHEN RAISING THE POLES. MAKE SURE THE POLE SLEEVES SLIDE OVER THE POLES WITHOUT HANGING UP.

**9-**Raise each of the orange-marked poles by inserting their ends into their matching color pole pockets (Fig 14). Raise the gray-marked pole by the same method.

**10-**Attach the (4) pole clips to the gray-marked pole (Fig 15).





11-Position the inner flaps on the top of the bed rails, under the orange straps, and pull out the slack (Fig 16).



12-Adjust all straps a final time. Make sure that the inner side flap seams run along the top outer edges of the bed rails (Fig 16).

## Set Up The Rainfly

The use of the rainfly is optional, depending on weather conditions.

- 1-Position the rainfly over the tent with the logo over the tent's door.
- **2-**Connect the (3) buckles on each side of the tent (Fig 17) and adjust their straps. The rainfly should cover the windows on both sides of the tent (Fig 18).



**3-**Tie the (3) strings at the rear edge of the rainfly to the tent poles (Fig 19). Line up the seams of the rainfly with the tent poles underneath (Fig 20).



CAUTION: DO NOT DRIVE WITH THE TENT SET UP. DO NOT RUN THE TRUCK ENGINE WHEN ANYONE IS INSIDE THE TENT. PLEASE OBSERVE THE CAUTION TAG ON THE INSIDE OF THE TENT.

## Take Down The Tent

- 1-Release the pole clips and take the poles out of the pole pockets. Lower the tent and remove the poles from the pole sleeves. Fold the poles and place them into the pole bag.
- **2-**Unclip the A, B, and C straps and loosen the tailgate strap.
- 3-Tilt the tailgate up and release the orange straps.
- **4-**Roll the tent, the rainfly, and the pole bag together (Fig 21). Place the rolled up tent into the stuff sack (Fig 22).





WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. THIS TENT MEETS THE FLAMMABILITY REQUIREMENTS OF CPAI-84. THE FABRIC MAY BURN IF LEFT IN CONTINUOUS CONTACT WITH ANY FLAME SOURCE. THE APPLICATION OF ANY FOREIGN SUBSTANCE TO THE TENT FABRIC MAY RENDER THE FLAME RESISTANT PROPERTIES INEFFECTIVE.

1 Year Manufacturer's Limited Warranty www.rightlinegear.com/product-warranty.html