




# Betty Crocker™

## Hand Mixer

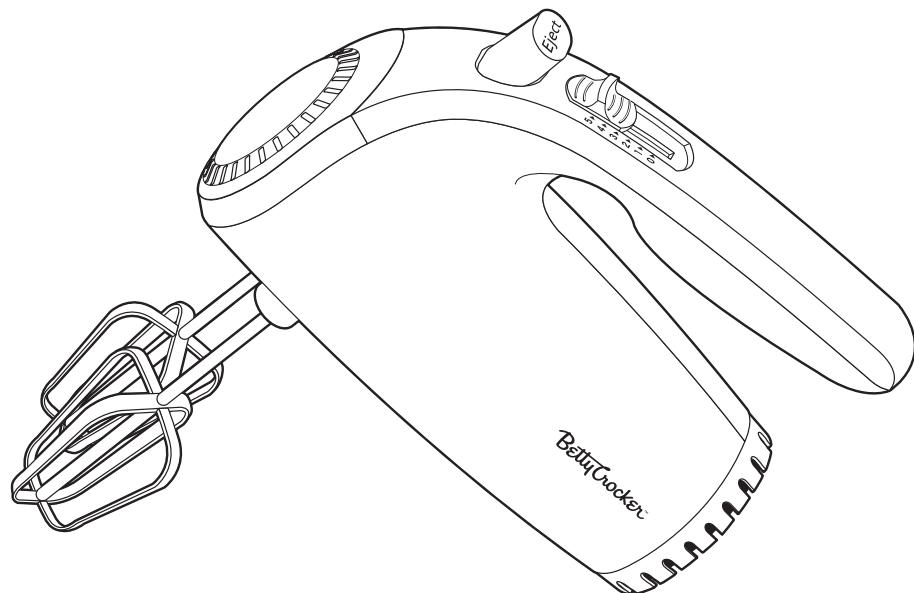

# Table of Contents

Important Safeguards.....	3
Before Your First Use .....	5
Know The Parts of Your Hand Mixer.....	6
Using your Hand Mixer.....	7
Mixing Guide .....	9
Care and Cleaning .....	10
Warranty.....	11
To Return for Service .....	12
Replacement Parts .....	13

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

1. **Read all instructions carefully before use.**
2. To protect against risk of electric shock, do not put mixer, cord or plug in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils, away from beaters during operation to reduce the risk of injury to person and/or damage to the mixer.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
10. Do not place on or near a hot gas or electric burner or in a heated oven.
11. To disconnect, turn the control to off, grasp plug and remove it from wall outlet. Never yank the cord to remove the plug.
12. Remove beaters from mixer before washing.
13. Do not use this appliance for other than intended use.

14. Do not twist, kink or wrap the power cord around the appliance as this may cause the insulation to weaken and split, particularly in the location where it enters the unit.
15. **Never leave appliance unattended while it is plugged into an outlet.**

## **SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY**

### **POWER CORD INSTRUCTIONS**

1. A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a long cord.
2. Extension cords may be used if care is exercised. If it is necessary to use an extension cord, it should be positioned so that it does not drape over the counter or tabletop where it can be pulled on or tripped over by children.
3. The electrical rating of the extension cord must be equal to or greater than the rating of this appliance. The label with the electrical rating is located on the underside of the appliance.
4. Avoid pulling or straining the power cord at outlet or appliance connections..

## **POLARIZED PLUG**


1. This appliance has a polarized plug (one blade is wider than the other).
2. To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way.
3. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, please contact a qualified electrician. Do not attempt to modify the plug in any way.

**WARNING:** Improper use of the power cord may result in the risk of electric shock. Consult a qualified electrician if necessary.

## **Before Your First Use**

Carefully unpack the hand mixer, beaters and whisk and remove all packaging materials. Set the mixer on a clean, dry table or counter. Wash the beaters and whisk in warm, soapy water. Dry thoroughly. The mixer may be wiped with a clean, damp cloth. Do not immerse the mixer body, cord or plug in water.

# Know the Parts of Your Hand Mixer

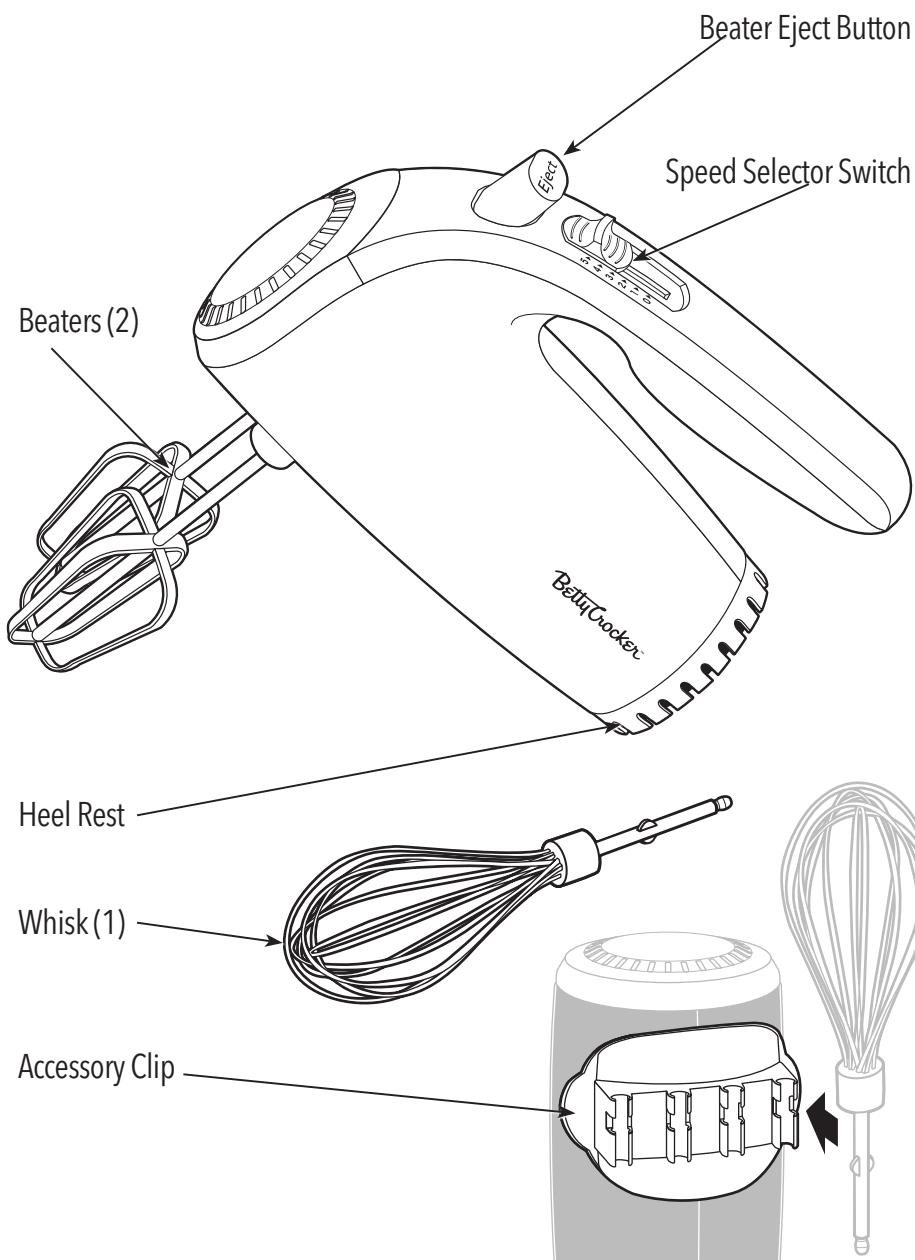

**RATING: 120V, 60Hz, 150W, AC ONLY**

# Using your Hand Mixer

Before using your Hand Mixer, ensure that the unit is assembled correctly.

## Inserting Beaters and Whisk

Be sure the unit is unplugged before inserting beaters or whisk.

Please note that the whisk is designed to fit in the mixer only one way. See fig. 1.

Firmly grasp the mixer by the handle. Insert the whisk into the left (smaller) opening. Push the whisk

in as far as it will go. The whisk will click as it locks into place. Plug the mixer into a 120 volt 60 Hz AC only outlet. Your mixer is now ready to use.

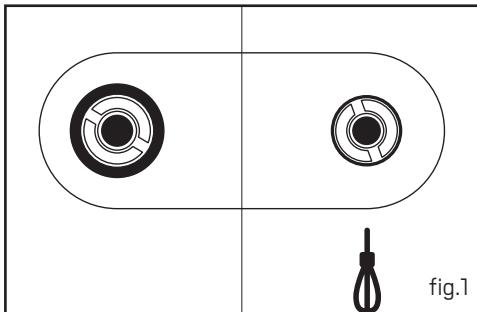


fig.1

## Removing Beaters

Your hand mixer has a beater eject button to allow easy removal of the beaters and whisk. Be sure the unit is unplugged and the speed switch is set to "OFF" before removing the beaters or whisk. With one hand holding the beaters or whisk, press the eject button. The beaters/whisk will drop out of their locks for easy cleaning.

**CAUTION: Never insert whisk with a beater. Whisk is to be used on its own.**

## Controlling the Mixer Speed

To operate your hand mixer, simply move the speed selector switch from the "OFF" (0) position to the desired speed. Your mixer will beat at the speed level you have selected. See fig. 2.

During operation, it is possible to alter the speed of the mixer by selecting a new speed setting. Your mixer has 5 speed levels (1 to 5).



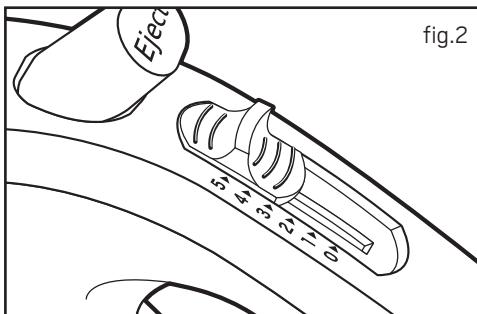


fig.2

## Storage Accessory Clip

To attach accessory clip, match the pins on the underside of the clip to the corresponding beater holes on the motor housing. See fig. 3.

Clip beaters and whisk into the shaft holders on the accessory clip. See fig. 4.

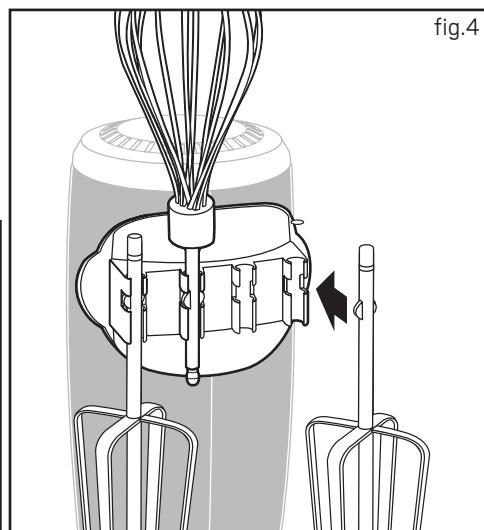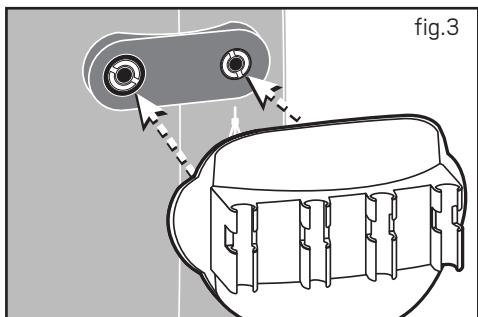

## Interrupting the Mixing Process

To stop your mixer, simply move the speed selector switch to the "OFF" (0) position. This will stop the beaters' rotation.

Your mixer has been designed with a heel rest to make mixing easier. Lift the mixer up from your mixing bowl. Stand the mixer on its heel with the beaters positioned over the mixing bowl. This will allow the batter to drip directly into the bowl. You may now add other ingredients as necessary. Resume mixing whenever you are ready.

**CAUTION: To prolong the life of your mixer, avoid getting flour into the air vents. Do not use the mixer for more than 5 minutes consecutively. After 5 minutes of use, allow the mixer to rest for a few minutes before continuing to mix ingredients.**

# Mixing Guide

SPEED	SUGGESTED USES
1	Folding in delicate ingredients. Mixing dry ingredients.
2	Stirring liquids or pastry. Blending liquids.
3	Blending ingredients, such as butter and sugar. Mixing batters, such as quick breads.
4	Mixing cake mixes and thick batters.
5	Mashing potatoes.
Use whisk attachment	Beating egg whites, whipping cream and meringue.

## Cleaning your Hand Mixer

Be sure mixer is unplugged before cleaning. Remove beaters or whisk from mixer and wash in warm soapy water. The mixer body may be wiped clean with a damp cloth.

**CAUTION: Do not immerse the cord, plug or mixer body in water or other liquid.**

## Care and Cleaning

Other than the care and cleaning procedures mentioned in this manual, no other servicing or maintenance of this unit is necessary. Any other servicing must be performed by an authorized service representative.

Always ensure that the Mixer is unplugged before cleaning.

To make cleaning easier, rinse removable parts immediately after processing.

**NOTE:** With prolonged use, the plastic components may deteriorate through the use of a dishwasher for cleaning. We recommend hand washing to prolong the life of your Hand Mixer.

Do not use abrasive detergents, harsh cleansers or scouring pads on any part of the Mixer. If necessary, a small nylon bristle brush may be used.

**CAUTION:** Do not immerse the base, cord or plug in water or any other liquid.

## LIMITED WARRANTY ONE (1) YEAR

This warranty is the only warranty for this product. This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase, as evidenced by the receipt of purchase, and provided it is used for the purpose for which the product is intended. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option. If the product should become defective within the warranty period, we will repair it or replace it free of charge. If the product or component is no longer available, we will replace with a similar one of equal or greater value. We will return your product, transportation charges prepaid provided it is delivered prepaid to Formula Brands Inc. Any and all remedies relating to this warranty are limited to the amount of the purchase price of the product. This warranty extends only to the original purchaser, consumer or gift recipient.

This warranty does not cover failure caused by food build-up, water deposits, normal cosmetic discoloration, and inadequate maintenance of the product. This warranty will not cover damage or failure to function if the product has been dismantled or tampered with, if it has been damaged due to exposure to water or any other liquid, if it is not used in conformity with the printed directions of this product or if it has been accidentally or intentionally damaged.

This warranty does not cover the following parts which may be supplied with the appliance: plastic parts, glass parts, glass containers, ceramic containers, cutter/strainer, filters or non-stick surfaces.

This product is intended for use in a single-family household. This warranty will become null and void if the product is used for commercial purposes or any other purpose other than for single-family household use.

We exclude all claims for special, incidental and consequential damages caused by breach of any express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

# TO RETURN FOR SERVICE:

1. Securely package and return the product PREPAID to:  
FORMULA BRANDS INC.  
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4

**NOTE:** We recommend you insure your parcel for your protection.

2. Please enclose your name, return address, postal code, telephone number and a description of the defect.
3. To ensure prompt 'In-Warranty' service, be sure to include a proof of purchase (a copy of your store receipt).
4. For repairs not covered under warranty, you will be advised of the cost of the repair in advance, and upon receipt of your cheque or money order the repairs will be completed and the product returned to you.

If at any time you order parts or inquire about service, please quote the "MODEL NUMBER" stamped on the appliance nameplate.


For assistance regarding this appliance, please call  
1-877-244-1110

between 9:00 am and 5:00 pm (EST) Monday to Friday  
or write


FORMULA BRANDS INC.  
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4  
or email:  
[customerservice@formulabrands.com](mailto:customerservice@formulabrands.com)

© General Mills. Betty Crocker and designs are trademarks of General Mills used under license.


# REPLACEMENT PARTS

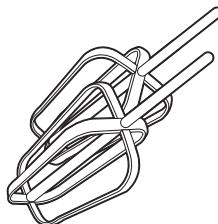

Beater

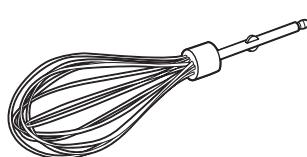

Whisk

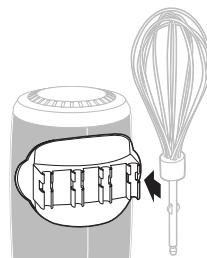

Accessory Clip

PLEASE WRITE MODEL NUMBER HERE:

PART	QTY	PRICE	TOTAL
Beater		\$5.99	
Whisk		\$4.99	
Accessory Clip		\$0.99	
<b>TOTAL</b>			
<b>SHIPPING AND HANDLING TO CANADA:</b>		\$9.00*	
<b>SHIPPING AND HANDLING TO USA:</b>		\$15.00*	
<b>SUBTOTAL</b>			
<b>ADD 13% H.S.T. - CANADA ONLY</b>			
		<b>TOTAL</b>	

If you would like to order replacement or spare parts for this appliance, please complete and mail this form, along with a cheque or money order made payable to:

FORMULA BRANDS INC.  
45 Mural Street, Unit #7,  
Richmond Hill, Ontario,  
Canada L4B 1J4

NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_

CITY \_\_\_\_\_

PROVINCE/STATE \_\_\_\_\_

POSTAL/ZIP CODE \_\_\_\_\_

Prices are subject to change without notice.

**PLEASE NOTE: WHEN ORDERING FROM USA, AN 'INTERNATIONAL' MONEY ORDER MUST BE USED.**



Allow 3 to 6 weeks  
for delivery.

\* Shipping costs may vary based on fuel surcharges and postage rates. Please call toll-free 1-877-244-1110 or email [customerservice@formulabrand.com](mailto:customerservice@formulabrand.com) to confirm shipping and handling charges.

BC-5201W  
07/25

