 




Betty Crocker™

10 Speed Stand Mixer

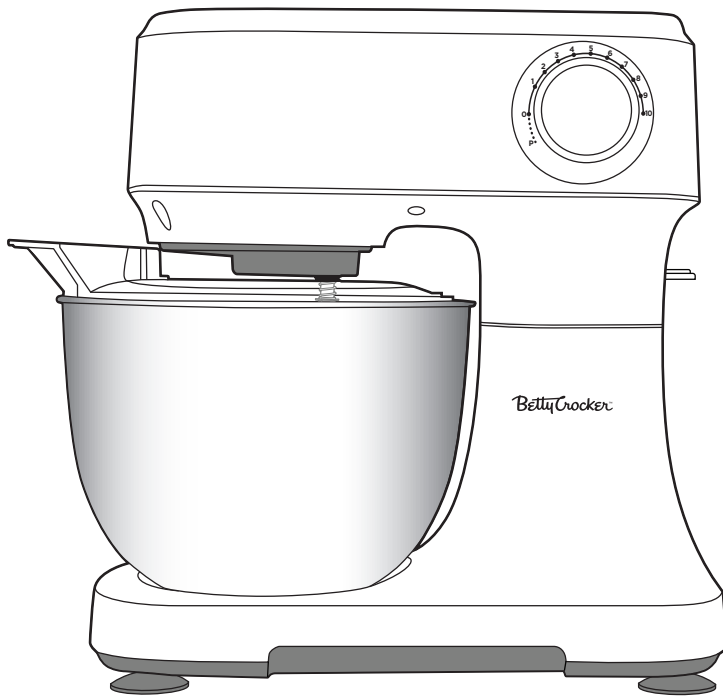

HOUSEHOLD USE ONLY

BC-4325W

TABLE OF CONTENTS

Important Safeguards 3

Before Your First Use..... 5

Getting to Know Your Stand Mixer 6

Assembling Your Stand Mixer..... 7

Using Your Stand Mixer 8

Cleaning Your Stand Mixer 9

Limited Warranty One (1) Year 10

To Return for Service..... 11

Replacement Parts..... 12

IMPORTANT SAFEGUARDS

When using electrical appliances, the following basic safety precautions should always be taken:

1. **Read all instructions before using the appliance.**
2. To protect against risk of electric shock, do not put mixer, cord or plug in water or other liquid.
3. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure they do not play with this appliance.
4. Always turn dial to the OFF (O) position and unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to person and/or damage to the mixer.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
10. Always ensure the appliance is completely assembled before operating.
11. Keep stainless steel bowl away from heat sources such as stovetops, ovens or microwaves.
12. Do not place on or near a hot gas or electric burner or in a heated oven.
13. To disconnect, turn the control to OFF (O), grasp plug and remove it from wall outlet. Never yank the cord to remove the plug.
14. Remove beaters from mixer before washing.
15. Do not use this appliance for other than intended use.
16. Do not twist, kink or wrap the power cord around the appliance as this may cause the insulation to weaken and split, particularly in the location where it enters the unit.
17. **Do not leave appliance unattended while in use.**

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

CONSUMER SAFETY INFORMATION

Ensure the mixer head is locked into the closed (horizontal) position when not in use and before storing.

POWER CORD INSTRUCTIONS

1. A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a long cord.
2. Extension cords may be used if care is exercised. If it is necessary to use an extension cord, it should be positioned so that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over unintentionally.
3. The electrical rating of the extension cord must be the same or higher than the wattage of the appliance (the wattage is shown on the rating label located on the underside or back of the appliance).
4. Avoid pulling or straining the power cord at outlet or appliance connections.

POLARIZED PLUG

1. Your appliance is equipped with a polarized plug (one blade is wider than the other).
2. To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.
3. If the plug does not fit fully into the outlet, reverse the plug. If it does not fit, please consult a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.



WARNING: Improper use of the power cord may result in electric shock. Consult a qualified electrician if necessary.

 
BEFORE YOUR FIRST USE

Carefully unpack the stand mixer, stainless steel mixing bowl, flat beater, whisk, splash guard and dough hook and remove all packaging materials. Set the stand mixer on a dry table or countertop. Wash the flat beater, whisk, splash guard and dough hook in warm soapy water. Dry thoroughly. The stand mixer may be wiped with a clean damp cloth.




WARNING: Do not immerse the mixer body, cord or plug in water or any other liquid.


GETTING TO KNOW YOUR STAND MIXER

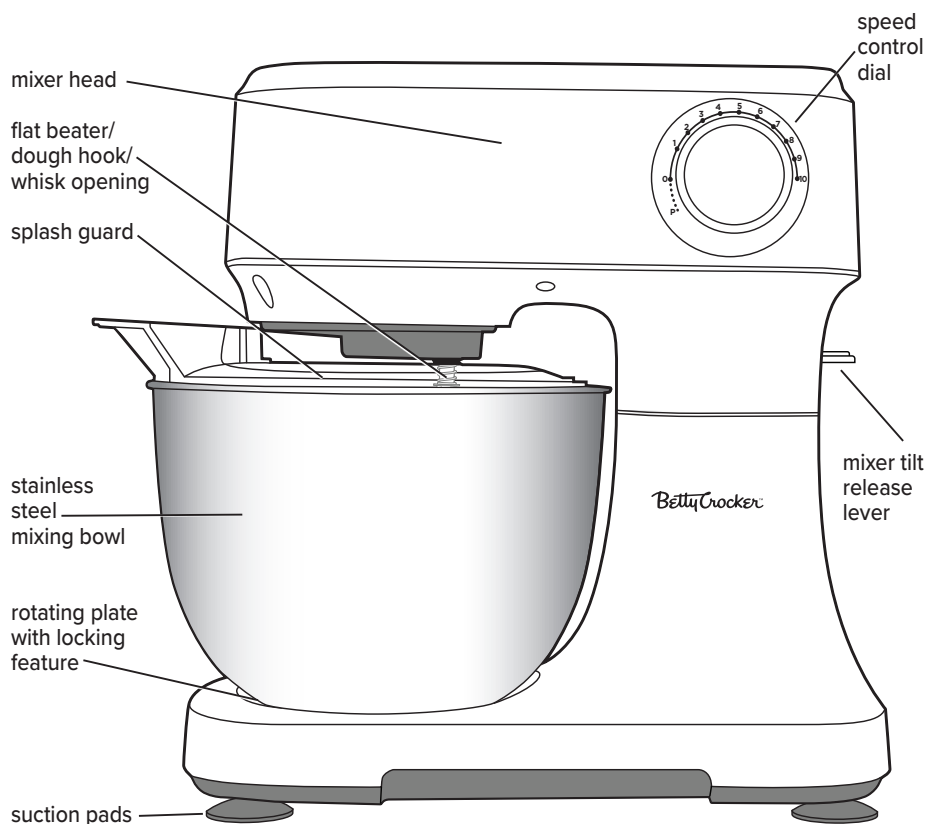


flat beater with
integrated scraper

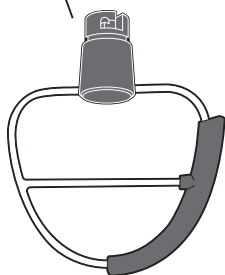 

dough hook

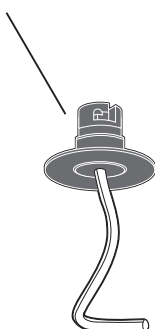 

whisk

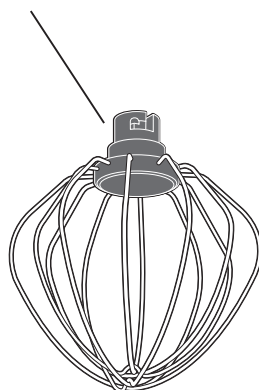 


RATING: 120V ~ 60Hz 300W AC ONLY


ASSEMBLING YOUR STAND MIXER

Be sure the unit is unplugged and speed control dial is in the OFF (O) position before inserting your mixing bowl, dough hook, whisk or flat beater.

 Lift the mixer tilt release lever up and raise the mixer head upwards until locks into place. See fig. 1.

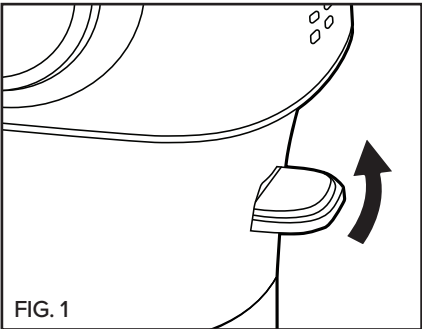

 
Insert the stainless steel mixing bowl into the locking recess, turn the mixing bowl clockwise until it locks into place. See fig. 2.

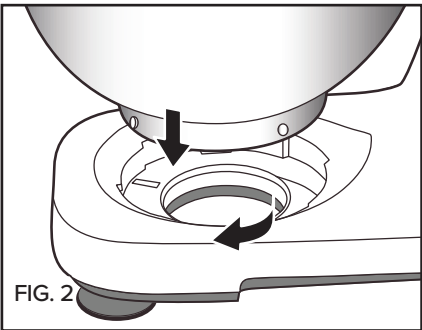


Insert the flat beater, whisk or dough hook by aligning the groove with the pin on the attachment shaft, then push and turn anticlockwise to lock it in place. See fig. 3.

To remove Push up and turn clockwise.

 Holding the stand mixer head, lift up the mixer tilt release lever again and fully lower the mixer head.

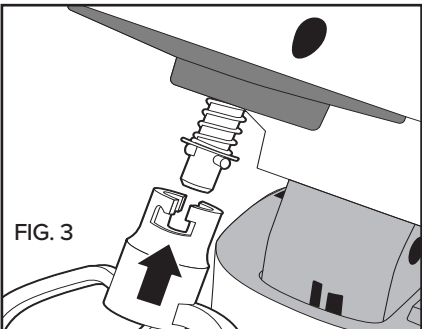

 Slide the splash guard onto the top of the mixing bowl. See fig. 4.

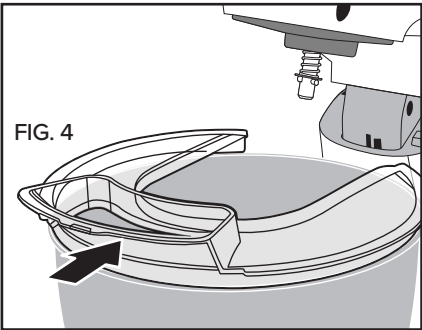

USING YOUR STAND MIXER

1. Place the stand mixer on a flat, dry, level surface such as a table or counter top.
2. Remove splash guard.
3. Lift up the mixer tilt release lever and raise the mixer head upwards until it locks into place.
4. Unlock the mixing bowl (turn the bowl counter-clockwise) and place your ingredients into the mixing bowl. Place the stainless steel bowl onto the locking recess and lock into place (as explained on page 7).
5. Insert the flat beater, dough hook, or whisk in the attachment shaft (as explained on page 7)
6. Lower the mixer head by lifting up the mixer tilt release lever and gently easing down.
7. Slide the splash guard onto the top of the mixing bowl
8. Plug cord into a working outlet.
9. Once your ingredients are placed in the bowl, start mixing on the lowest speed setting and gradually work up to a faster speed to prevent splashing.

Interrupting the Mixing Process

To stop the stand mixer, simply turn the speed control dial to the OFF (O) position. This will stop the rotation. Remove the splash guard and lift the mixer from the mixing bowl by lifting up the tilt release lever and lift the mixer upwards. This will allow the batter to drip directly into the bowl. You may now scrape the sides of the bowl or add more ingredients. Once ready to resume mixing, lift up the tilt button to lower the mixer into the bowl and slide in the splash guard back onto the top of the mixing bowl.

WARNING: NEVER operate the Stand Mixer when the Mixer is in the Tilt position.

CAUTION: To prolong the life of the stand mixer, avoid getting flour into the air vents. Do not use the mixer for more than 5 minutes consecutively. After 5 minutes of use, allow the stand mixer to rest for a few minutes before resuming mixing.

10. Once all the ingredients have reached the desired consistency, turn the speed control dial to OFF (O) and unplug the mixer from the outlet.
11. Remove the splash guard. Lift up the tilt release lever and raise the mixer to allow any excess ingredients to drip off the beater or dough hook.

12. Gently scrape any excess ingredients from the flat beater, whisk or dough hook with a silicone spatula. Do not strike the flat beater, whisk or dough hook against the stainless steel bowl to remove excess ingredients as this could damage the bowl or the flat beater, whisk or dough hook.
13. Unlock the mixing bowl and carefully remove it from the rotating plate. Pour ingredients from the bowl into desired container.

CLEANING YOUR STAND MIXER

Be sure mixer is unplugged before cleaning. Remove mixing bowl, dough hook, flat beater, whisk and splash guard from mixer. Wash in warm soapy water. Dry thoroughly. The mixer body and stand may be wiped clean with a damp cloth.

Caution: Do not immerse the cord, plug, mixer body or stand in water or other liquid.

LIMITED WARRANTY ONE (1) YEAR

This warranty is the only warranty for this product. This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase, as evidenced by the receipt of purchase, and provided it is used for the purpose for which the product is intended. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option. If the product should become defective within the warranty period, we will repair it or replace it free of charge. If the product or component is no longer available, we will replace with a similar one of equal or greater value. We will return your product, transportation charges prepaid provided it is delivered prepaid to Formula Brands Inc. Any and all remedies relating to this warranty are limited to the amount of the purchase price of the product. This warranty extends only to the original purchaser, consumer or gift recipient.

This warranty does not cover failure caused by food build-up, water deposits, normal cosmetic discoloration, and inadequate maintenance of the product. This warranty will not cover damage or failure to function if the product has been dismantled or tampered with, if it has been damaged due to exposure to water or any other liquid, if it is not used in conformity with the printed directions of this product or if it has been accidentally or intentionally damaged.

This warranty does not cover the following parts which may be supplied with the appliance: plastic parts, glass parts, glass containers, ceramic containers, cutter/strainer, filters or non-stick surfaces.

This product is intended for use in a single-family household. This warranty will become null and void if the product is used for commercial purposes or any other purpose other than for single-family household use.

We exclude all claims for special, incidental and consequential damages caused by breach of any express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

TO RETURN FOR SERVICE:

1. Securely package and return the product PREPAID to:
FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4

NOTE: We recommend you insure your parcel for your protection.

 
2. Please enclose your name, return address, postal code, telephone number and a description of the defect.
3. To ensure prompt 'In-Warranty' service, be sure to include a proof of purchase (a copy of your store receipt).
4. For repairs not covered under warranty, you will be advised of the cost of the repair in advance, and upon receipt of your cheque or money order the repairs will be completed and the product returned to you.

If at any time you order parts or inquire about service, please quote the "MODEL NUMBER" stamped on the appliance nameplate.

For assistance regarding this appliance, please call
1-877-244-1110
between 9:00 am and 5:00 pm (EST) Monday to Friday
or write
FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4
or email:
customerservice@formulabrands.com

© General Mills. Betty Crocker and designs are trademarks of General Mills used under license.


REPLACEMENT PARTS

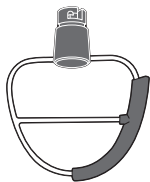


Flat Beater



 Dough Hook

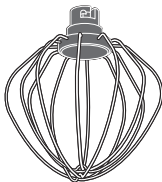

Whisk

 

Splash Guard



Stainless Steel Mixing Bowl



PLEASE WRITE MODEL NUMBER HERE:

PART	QTY	PRICE	TOTAL
Dough Hook		\$9.99	
Flat Beater		\$9.99	
Whisk		\$11.99	
Splash Guard		\$10.99	
Stainless Steel Mixing Bowl		\$18.99	
TOTAL			
SHIPPING AND HANDLING TO CANADA:			\$9.00*
SHIPPING AND HANDLING TO USA:			\$15.00*
SUBTOTAL			
ADD 13% H.S.T. – CANADA ONLY			
TOTAL			

If you would like to order replacement or spare parts for this appliance, please complete and mail this form, along with a cheque or money order made payable to:

FORMULA BRANDS INC.
Parts Department
45 Mural Street, Unit #7,
Richmond Hill, Ontario,
Canada L4B 1J4

NAME

ADDRESS

CITY

PROVINCE/STATE

POSTAL/ZIP CODE

Prices are subject to change without notice.

PLEASE NOTE: WHEN ORDERING FROM USA, AN 'INTERNATIONAL' MONEY ORDER MUST BE USED.

* Shipping costs may vary based on fuel surcharges and postage rates. Please call toll-free 1-877-244-1110 or email customerservice@formulabrands.com to confirm shipping and handling charges.

Allow 3 to 6 weeks
for delivery.

BC-4325W
04/24