



## Odyssey Quick Start Guide

Thank you for your purchase of the Eton Odyssey Radio. Please use this document as a quick start guide for the product, and reference the product manual for more detailed instruction. Inside the box, you'll find the Odyssey, a USB-A to USB-C Charging cable, micro screwdriver and clip

**Do this first!** The Odyssey has a master power switch for storage and to reduce battery draw. To turn on the master power:

1. Open the rubber tab on the top
2. Slide the switch to the right for the "on" position to the right
3. **The master power switch must be on to charge via USB-C**

Once powered, the screen will turn on. If the screen does not turn on, charge the unit and try again.

If desired, turn the master power switch off when storing the device to conserve energy. Your presets and clock settings will be erased.



Powering the device	Press the POWER button to turn the device on or off. When off, the display will show the time.
Selecting Radio Band and Tuning	<p>1. Switch Bands: With the radio on, press the MENU button to toggle between FM, AM, SW, WB (Weather Band), ALERT, and Bluetooth modes.</p> <p>2. Tune Stations: Use the UP/DOWN buttons to navigate through stations. Hold down for auto-search.</p> <p>3. Auto Store Stations: Press the AUTO TUNE button to scan and automatically store up to 30 stations <b><u>FM stations</u></b>. To scroll through programmed stations, press the "SEL" button.</p> <p>Note: When traveling or moving to a new location, repeat the auto-scan in new locations to update station frequencies.</p>
Weather Band and Alerts	<p>1. Activate Weather Band: Toggle MENU to WB mode and tune to your local WB frequency.</p> <p>2. Enable ALERT Mode: Press MENU again to enter ALERT mode. "Alert" will appear on the display, and audio will turn off. The radio will continue monitoring for alerts and activate the audio if an alert is issued.</p> <p>3. Cancel Alert: Press MENU or POWER to turn off the alert.</p> <p>NOAA issues a test alert every Wednesday between 10 a.m. and noon, regardless of location.</p> <p>Note: To find your NOAA station, visit <a href="https://www.weather.gov/nwr/station_listing">https://www.weather.gov/nwr/station_listing</a></p>
Using Bluetooth	<p>1. Enable Bluetooth: Press MENU to activate Bluetooth (symbol will show on the display and Odyssey will say "Bluetooth").</p> <p>2. Connect Device: Turn on Bluetooth on your phone or other device and select "ODYSSEY" to connect.</p>

Charging the Device	<p><b>1. <u>The master power switch must be in the ON position.</u></b></p> <p>2. USB-C Charging: Connect the USB-C cable to charge the device.</p> <p>3. Solar Charging: Place the device in direct sunlight to charge the internal battery.</p> <p>4. Crank Charging: Turn the crank handle; the charging icon will appear. Stop cranking if the handle feels loose, as this indicates a full charge.</p> <p>Note: The Odyssey device includes a safety chip to prevent overcharging.</p>
Use the Flashlight and Siren Function	<p>1. Toggle Light Modes: Press the LIGHT button to cycle through low light, medium light, high light, and off.</p> <p>2. Activate Siren: Press the SOS button to enable the loud siren and red flashing light.</p>
Charging a Phone or Tablet	<p>Use USB-A Output: Connect your phone's USB charging cable to the USB-A OUT port on the Odyssey. Plug the other end into your device, and charging will start automatically. "OUT" will appear on the display.</p>
Setting the Clock	<p>1. With the power off, press and hold the MENU button.</p> <p>2. 12H/24H Format: Use the UP or DOWN button to choose between 12-hour and 24-hour formats, then press SEL to confirm.</p> <p>3. Set Time: Adjust the hours and minutes by using the UP/DOWN buttons and pressing SEL to confirm each digit.</p> <p>4. Press SEL again to finish set-up</p>
Setting the Alarm	<p>1. With the power off, press AUTO TUNE; a clock icon will appear.</p> <p>2. Set Time: Use UP/DOWN to set the alarm time, confirming each digit by pressing the SEL button.</p> <p>3. Enable/Disable Alarm: With the unit off, press the AUTO TUNE button to activate or deactivate the alarm. A clock icon will show on the display when the alarm is set.</p> <p>The device will turn on to the last-used radio setting when the alarm goes off.</p>

Thanks again for your purchase of the Eton Odyssey Radio. For additional help, refer to the full manual or visit [www.etoncorp.com](http://www.etoncorp.com). Happy Listening!