 
 


Check that you have all your parts and accessories.



JX3-SS UNIT



BRACKET BOLTS (4X)



BRACKET CLAMPS (2X)



HAND CRANK



REMOVABLE WHEEL ASSEMBLY



T-HANDLE PULL-PIN



MOUNT BRACKET



ROTATION/SECURITY PIN



SECURITY/SHOULDER BOLT



COTTER PIN



DRILL ATTACHMENT



MANUAL




TRAILER VALET JX3-SS


Quick Start Guide

Rev 03.19.25


Assembly

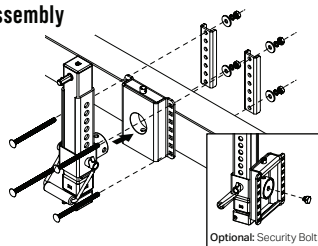

1. Place the mounting bracket onto an 8 inch clearing on your frame where the jack can freely rotate from its vertical position to its horizontal stow position. Secure with the four included bolts at desired height.

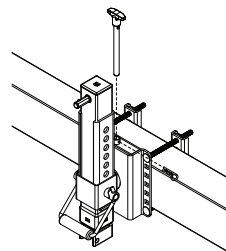


2. Install the T-handle pull pin and cotter pin to secure the jack. These pins are to be removed when either detaching or stowing the jack.

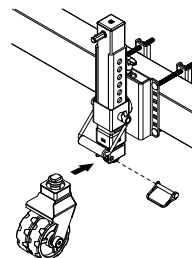


3. Slide the wheel base into the jack coupling and secure it with the rotation pin.

Height Adjustment

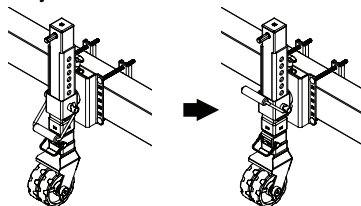

1. Lift the drop bracket handle to the up position to unlock the bracket.
CAUTION: When the drop bracket handle is lifted, the jack may need to be supported since the jack can drop when the handle is unlocked.

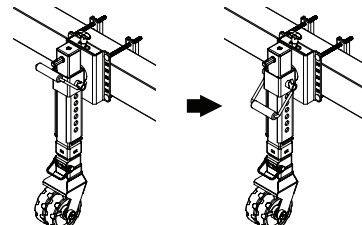


2. Move the jack to the desired height and return handle into low position to lock and secure the trailer jack.

IMPORTANT SAFETY INFORMATION


For information and assistance, please visit our support page at TrailerValet.com or give us a call at (844) 846-9344. Scan the QR code to the right for detailed safety and usage information.



Check that you have all your parts and accessories.

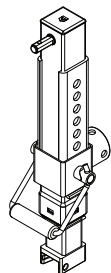

JX3-SS UNIT

 

BRACKET BOLTS (4X)



BRACKET CLAMPS (2X)



HAND CRANK



REMOVABLE WHEEL ASSEMBLY



T-HANDLE PULL-PIN



MOUNT BRACKET



ROTATION/SECURITY PIN



SECURITY/SHOULDER BOLT



COTTER PIN



DRILL ATTACHMENT




MANUAL



TRAILER VALET JX3-SS


Quick Start Guide

Manual Operation

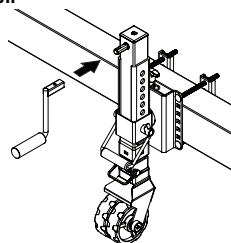


1. Attach the Hand Crank to the driveshaft located at the top of the unit.


Drill Operation

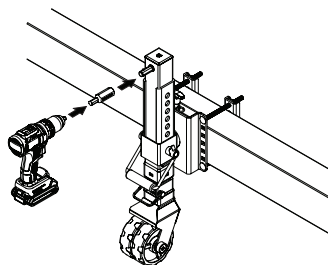

1. Slot the Drill Adapter into your drill chuck and secure tightly to avoid the adapter slipping.
2. For proper use, hold the drill firmly and begin to squeeze the trigger slowly, increasing the power up to an appropriate speed.

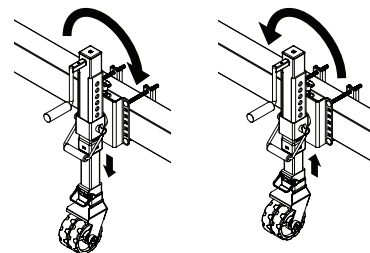

2. Turning the handle clockwise will extend the jack. Turning the handle counter-clockwise will retract the jack.

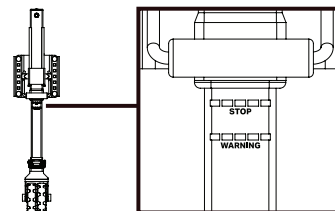

WARNING

Gradually decrease speed when approaching maximum extension. This is indicated by a printed warning line on the inner tube of the jack.

IMPORTANT SAFETY INFORMATION

For information and assistance, please visit our support page at TrailerValet.com or give us a call at (844) 846-9344. Scan the QR code to the right for detailed safety and usage information.

