



SCREEN GAZEBO

USER GUIDE



HCSSCRNG4



HCSSCRNG6

Thank you for purchasing the **Hike Crew Screen Gazebo**. This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

Please read all directions before using the product and retain this guide for reference.

This product is intended for domestic use only. It is not intended for commercial use.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

SAFETY PRECAUTIONS

WARNING! Please read and understand all safety precautions and instructions before setting up this tent. Keep this manual for future reference.

- **DISCLAIMER: This tent is flame-resistant, but is NOT fireproof. The fabric will burn if left in contact with an open flame or heat source. Contact with any foreign substances to the tent fabric may render the flame-resistant properties ineffective.**
- Keep heat sources (candles, matches, and etc.) away from this tent.
- Don't build campfires near the tent. Always extinguish campfires before leaving campsite or retiring into the tent.
- Do not cook inside of gazebo.
- Never use open flame devices in or near this tent.
- Do not refuel lamps, heaters, or stoves inside of tent.
- Always take extreme caution and monitor lanterns and heaters inside of the tent.
- Do not smoke in the gazebo.
- Do not store flammable liquids inside the tent.
- Take down the gazebo when not in use to avoid unnecessary damage from outdoor elements.
- Never store tent when wet. Always allow gazebo to dry in order to prevent mildew and mold.
- Do not leave gazebo outdoors when not in use.
- Never allow children to enter and play in gazebo unattended.

 
PACKAGE CONTENTS

- Screen gazebo
- Carry bag
- User guide


ASSEMBLY INSTRUCTIONS

Gazebo Setup

1. Locate a level, flat surface that is clear of debris to prevent rips or cuts while setting up your tent.
2. Lay the tent flat on the cleared-out area. Then, check that there is no material twisting or overlapping.

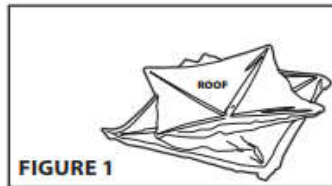

 
3. Grasp the webbing loop sewn into the center of the top panel and pull the loop outward.

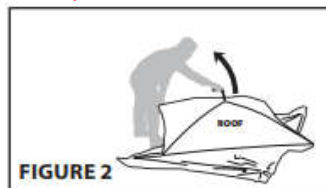


4. Continue around the tent pulling the loops on the side wall panels outward. Pull until side wall panels are popped out. (The fiberglass poles should pop out into place holding up the gazebo.)



 5. With the gazebo now freestanding, locate the zippered door, and walk into the tent.

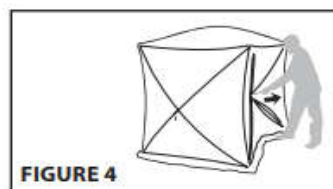

 
6. Once inside the gazebo, place a hand on the top panel and push up until roof pops into place.
7. Move outside and anchor your gazebo down at each corner by tying the ropes down to the pegs (or stakes) provided.

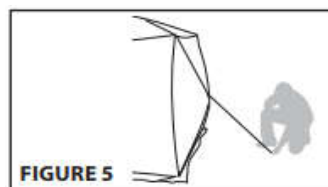


8. Place pegs firmly into the ground and hammer down the peg to keep gazebo stable.

Gazebo Takedown

 1. Remove pegs and untie ropes on the pegs.
2. Move around the tent and push side wall panels inward so that the gazebo collapses.

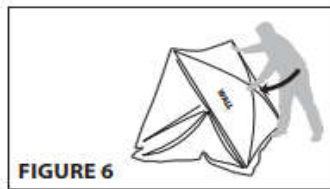

 3. Push the top panel inward. The tent should now be back on the ground in its flattened state.

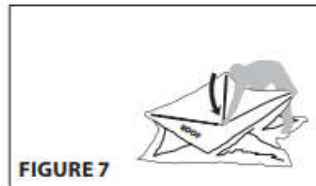

4. Gather the corners of the tent and fold the corners together.



5. Take the folded tent and insert it into carry bag. Place the pegs and ropes in bag as well.

NOTE: Do not force the tent when folding. If tent is hard to fold, check for overlaps and entanglements in the tent.

MAINTENANCE/STORAGE INSTRUCTIONS

- Take down the tent when not in use. Do not leave tent unattended.
- Never store the tent when it is wet. Always let the tent dry before storing it.
- Use extra tie-downs during excessive winds.
- Clean and wipe down the tent before storing it for long periods of time.
- Store the tent in a cool, dry area.

SPECIFICATIONS

- Dimensions (4-sided): 70" x 70" x 80" (177.8 x 177.8 x 203.2 cm)
- Weight (4-sided): 18.5 lbs. (8.4 kg)
- Dimensions (6-sided): 140" x 140" x 85" (355.6 x 355.6 x 215.9 cm)
- Weight (6-sided): 30.2 lbs. (13.7 kg)
- Fabric Material: Polyester and Black Mesh
- Pole Material: Fiberglass

**Hike Crew wind panels and wind panels with window are sold separately.*



WARRANTY INFORMATION

LIMITED WARRANTY ON HIKE CREW SCREEN GAZEBO

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE. WE WARRANT THAT DURING THE WARRANTY PERIOD, THE PRODUCT WILL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP.

LIMITATION OF LIABILITY

TO THE EXTENT NOT PROHIBITED BY LAW, THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. EXCEPT FOR THE EXPRESS WARRANTIES CONTAINED IN THIS LIMITED WARRANTY STATEMENT AND TO THE EXTENT NOT PROHIBITED BY LAW, WE DISCLAIM ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, STATUTORY OR OTHERWISE, INCLUDING WITHOUT LIMITATION, THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SOME STATES DO NOT ALLOW DISCLAIMERS OF IMPLIED WARRANTIES, SO THIS DISCLAIMER MAY NOT APPLY TO YOU. TO THE EXTENT SUCH WARRANTIES CANNOT BE DISCLAIMED UNDER THE LAWS OF YOUR JURISDICTION, WE LIMIT THE DURATION AND REMEDIES OF SUCH WARRANTIES TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY. OUR RESPONSIBILITY FOR DEFECTIVE GOODS IS LIMITED TO REPAIR, REPLACEMENT OR REFUND AS DESCRIBED BELOW IN THIS WARRANTY STATEMENT.

WHO MAY USE THIS WARRANTY? C&A Marketing, Inc. located at 114 Tived Lane East, Edison, NJ (“we”) extend this limited warranty only to the consumer who originally purchased the product (“you”). It does not extend to any subsequent owner or other transferee of the product.

WHAT DOES THIS WARRANTY COVER? This limited warranty covers defects in materials and workmanship of the Hike Crew Screen Gazebo (the “product”) for the Warranty Period as defined below.

WHAT DOES THIS WARRANTY NOT COVER? This limited warranty does not cover any damage due to: (a) transportation; (b) storage; (c) improper use; (d) failure to follow the product instructions or to perform any preventive maintenance; (e) modifications; (f) unauthorized repair; (g) normal wear and tear; or (h) external causes such as accidents, abuse, or other actions or events beyond our reasonable control.

WHAT IS THE PERIOD OF COVERAGE? This limited warranty starts on the date of your purchase and lasts for one year (the “Warranty Period”). The Warranty Period is not extended if we repair or replace the product. We may change the availability of this limited warranty at our discretion, but any changes will not be retroactive.

WHAT ARE YOUR REMEDIES UNDER THIS WARRANTY? With respect to any defective product during the Warranty Period, we will, at our sole discretion, either: (a) repair or replace such product (or the defective part) free of charge or (b) refund the purchase price of such product if an exchange unit cannot be provided.

HOW DO YOU OBTAIN WARRANTY SERVICE? To obtain warranty service, you must contact us at 1-833-855-1816 or by email at info@supportcbp.com during the Warranty Period to obtain a Defective Merchandise Authorization ("**DMA**") number. No warranty service will be provided without a DMA number and return shipping costs to our facilities shall be assumed by you, the purchaser. Shipping costs of the replacement unit to you shall be assumed by us.

GET IN TOUCH!

info@supportcbp.com
1-833-855-1816

HIKE CREW is a trademark of C&A IP Holdings LLC in the US, Canada, China, and the EU.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement, or approval.

Distributed by C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837. Made in China.

© 2021. C&A IP Holdings LLC. All Rights Reserved.