



Betty Crocker™

Waffle Maker Station

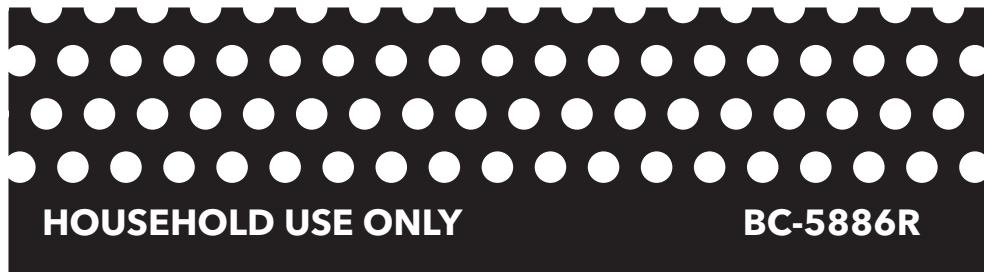
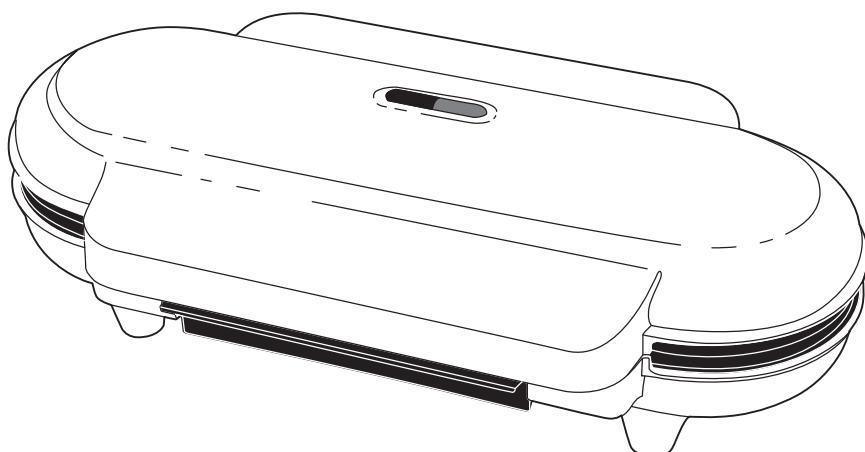


Table of Contents

Important Safeguards	3
Before Your First Use	5
Getting To Know Your Waffle Maker	6
Using Your Waffle Maker	7
Recipe	9
Care and Cleaning Your Waffle Maker	10
Limited Warranty One (1) Year	11
Replacement Parts	13

IMPORTANT SAFEGUARDS

When using electrical appliances, the following basic safety precautions should always be taken:

1. **Read all instructions before using the appliance.**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock, and injury to persons, do not immerse cord, plug, or unit in water or any other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
6. Unplug the unit from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service centre for examination, repair or electrical or mechanical adjustment.
8. The use of accessory attachments not recommended or sold by the appliance manufacturer may cause fire, electrical shock, or injury, and is therefore prohibited.
9. Do not use outdoors.
10. Do not allow the cord to hang over the edge of table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. To disconnect, remove the plug from wall outlet.
13. Extreme caution must be used when moving an appliance containing hot foods, such as batter or hot cheese.
14. Do not use appliance for other than intended use.
15. Do not twist, kink or wrap the power cord around the appliance as this may cause the insulation to weaken and split, particularly in the location where it enters the unit.
16. Do not attempt to dislodge food when appliance is plugged in.
17. To prevent fire, ensure the unit is not covered or touching flammable material, including curtains, draperies or walls during operation.
18. Do not move unit when it is still hot.

19. **NEVER leave appliance unattended while in use.**
20. Always place appliance on a heat resistant surface.
21. **DO NOT touch the metallic part of the unit while the appliance is operating.**
These can become very hot.
22. **ALWAYS** use protective, heat-resistant gloves or mitts when handling this product to avoid steam or other burns.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

CONSUMER SAFETY INFORMATION

POWER CORD INSTRUCTIONS

1. A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a long cord.
2. Extension cords may be used if care is exercised. If it is necessary to use an extension cord, it should be positioned so that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over unintentionally.
3. The electrical rating of the extension cord must be the same or more than the wattage of the appliance (the wattage is shown on the rating label located on the underside or back of the appliance).
4. Avoid pulling or straining the power cord at outlet or appliance connections.

POLARIZED PLUG

1. Your appliance is equipped with a polarized plug (one blade is wider than the other).
2. To reduce the risk of injury this plug must be inserted into a properly installed outlet.
3. If the plug does not fit fully into the outlet, reverse the plug. If it does not fit, please consult a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.



WARNING: Improper use of the power cord may result in electric shock. Consult a qualified electrician if necessary.

BEFORE YOUR FIRST USE



Carefully unpack the Waffle Maker and remove any packaging materials. Set the appliance on a clean, dry and heat-resistant counter or table. Wipe the surface of the cooking plates with a clean, damp cloth or sponge, then dry with another cloth. This will remove any dust that may have settled during packaging. Wipe the cooking plates with a small amount of cooking oil.

Wipe the outside of the appliance with a clean, damp cloth or sponge. Do not immerse the unit in water or other liquid. Do not use harsh or abrasive cleaners.



Warning: Always ensure your plates are installed correctly on the unit before plugging into an electrical outlet.

GETTING TO KNOW YOUR WAFFLE MAKER

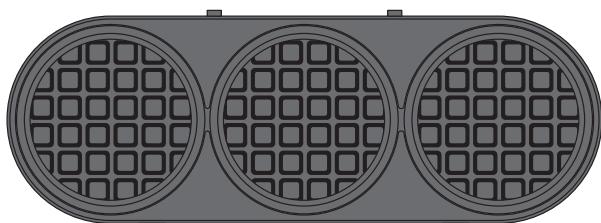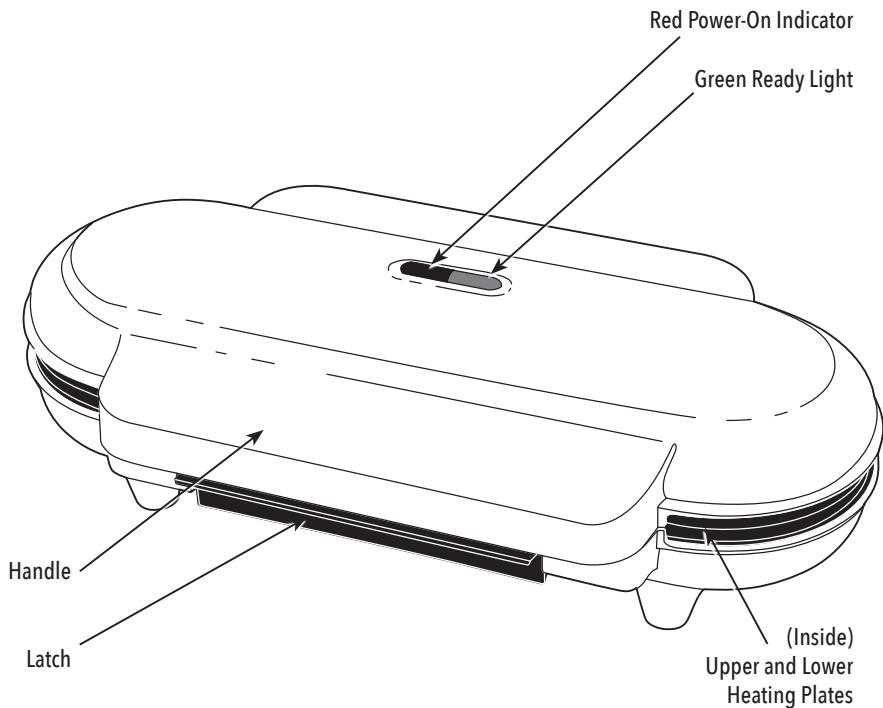

Nonstick Waffle Plate (1)

RATING: 120 V, 60 Hz 1000 Watts, AC ONLY

USING YOUR WAFFLE MAKER

⚠ WARNING: Never leave the appliance unattended when plugged into an electrical outlet.

See the Care and Cleaning Section for directions on how to install the plate (page 10). With the plate installed, ensure the unit is on a dry, flat, heat-resistant surface.


1. Place the waffle maker on a clean, dry, heat-resistant level surface. Plug the waffle maker into a 120 volt 60 Hz AC only outlet. Close the lid and always allow the unit to preheat.

CAUTION: The red "Power-On" light will come on when the unit is plugged in.

NOTE: Before your first use, and approximately every 4 to 5 cooking cycles, it is important to wipe on a small amount of cooking oil or nonstick spray, to season the nonstick plates.

CAUTION: Steam may come from the sides and front of the waffle maker while opening or closing the lid and during baking. Use care not to burn yourself.

NOTE: Bake only with the lid in the closed position.

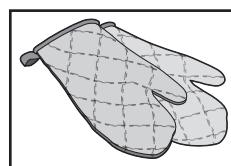

WARNING: The waffle maker cooking plates get very hot. Avoid touching them and the outer housing to avoid possible injury.


***Always use oven mitts when using your appliance.**

2. After a few minutes, the green "Ready Indicator Light" will turn on, indicating that the unit is now ready to cook. Lift the lid to its full upright position. Carefully pour approximately 2-2½ tbsp of batter into the centre of each plate. Do not over fill the plate. Use the back of the spoon to level the batter evenly. Carefully lower the lid. **The "Ready Indicator Light" will now be off.**
3. Waffles should be fully baked in about 5-8 minutes. Depending on personal preference and taste, this time may vary slightly. Please note that the green "Ready Indicator Light" will turn on and off during the cooking cycle. This is simply the waffle maker adjusting temperature as the waffles are being cooked.

NOTE: Do not open the waffle maker during the first 3 minutes of cooking. Allow the waffles to bake a little longer, then try lifting the lid again.

To open the lid, pinch handle to release latch

4. When ready, lift the lid to its full upright position. Remove the waffles from the waffle maker with a plastic or wooden spatula. Do not use metal utensils as they may damage the surface of the cooking plates. Lower the lid between baking waffles or while making additional batter to preserve the heat.

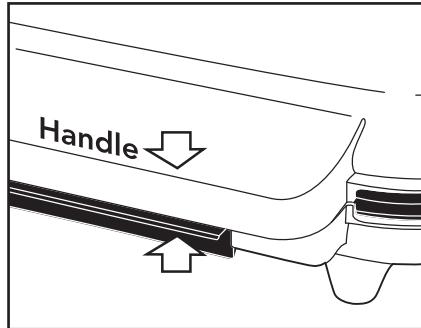

CAUTION: Avoid leaving the waffle maker plugged in with no batter on the cooking plates for an extended length of time.

5. When finished making waffles, be sure to unplug the waffle maker and allow it to cool before cleaning and storing.
6. Always follow cleaning instructions (page 10) before storing.
7. The waffle maker can be latched closed and stored upright.

WARNING: The waffle maker cooking plates get very hot. Avoid touching them and the outer housing to avoid possible injury.

Never cook without the top & bottom plates installed properly in place.

Helpful Hints

- To ensure your waffles are evenly filled, pour batter into the centre of the lower cooking plate. NOTE: Do not overfill the cooking plates.
- If waffles stick to the top cooking plates, remove them with a plastic or wooden spatula.
- If you do not want to serve your waffles right away, you may place them in an ovenproof dish and keep them warm in the oven at a low temperature of about 200°F (100°C). You may wrap the waffles in foil, but they may lose their crispiness.
- You may also freeze your waffles for a later date. Allow the waffles to cool completely before putting them in a plastic bag suitable for the freezer. You

may use waxed paper in between the waffles to keep them separated. When you are ready, reheat the waffles in a toaster or toaster oven.

RECIPE

2 cups (500mL) all-purpose flour

1 tablespoon (15 mL) sugar

4 teaspoons (20 mL) baking powder

1/4 tsp (1mL) salt

2 eggs

1 3/4 cups (400mL) of milk

1/2 cup (125mL) melted butter or vegetable oil

In a medium bowl, combine the flour, sugar, baking powder and salt. In a separate bowl whisk the eggs, milk and melted butter or vegetable oil until well blended. Pour the wet ingredients into the dry ingredients and mix until well blended.

Lightly coat the nonstick cooking plates with butter, vegetable oil or cooking spray. Heat the waffle maker by following the instructions located on page 7.

Makes about ten (10) waffles or 3-1/2 cups (800ml) of batter.

CARE AND CLEANING YOUR WAFFLE MAKER

CHANGING THE PLATE

Only the bottom Cooking Plate is detachable and can only be changed when the unit is cold.



Unplug the waffle maker and allow it to cool before removing the plate.

To change the Cooking Plate, open the lid so that the Cooking Plates are facing you. To remove the bottom Cooking Plate, place your two thumbs on the small tabs in front of the plate and slide them toward you (fig. 01). The Cooking Plate will pop up and can be lifted out. Be sure that your hands are in front of the Cooking Plate so it does not fall forward.

To insert the Plates, place the tabs at the back of the Cooking Plate against the slots provided (fig. 02).

Press the Cooking Plate down at both corners that are closest to the locking tabs until you hear the click sound. Ensure Cooking Plate stays in place.

It is possible the plate tabs may be damaged from hard impacts and may cause a retaining tab to not function, and should not be used if it cannot attach securely.

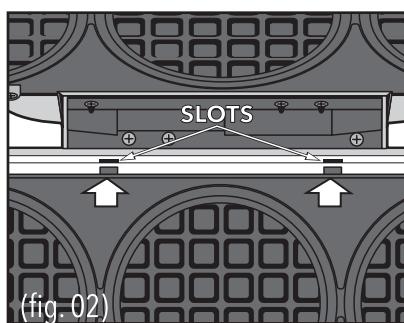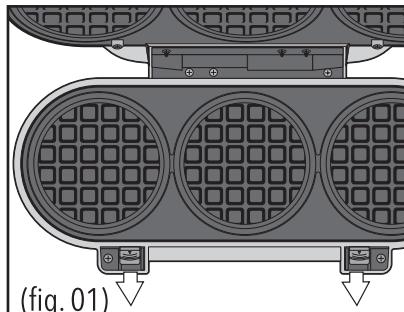

CLEANING

Be sure to unplug the appliance and allow it to cool completely before cleaning.

CAUTION: Do not immerse in water or any other liquid.

Always wipe the inside and the edges of the cooking plates with a clean, damp cloth after every use. To remove stubborn stains or food, use a nylon brush or other utensil safe for nonstick surfaces. Do not use steel wool or scouring pads. Do not use abrasive cleansers. Wipe the exterior with a clean, damp cloth.

LIMITED WARRANTY ONE (1) YEAR

This warranty is the only warranty for this product. This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase, as evidenced by the receipt of purchase, and provided it is used for the purpose for which the product is intended. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option. If the product should become defective within the warranty period, we will repair it or replace it free of charge. If the product or component is no longer available, we will replace with a similar one of equal or greater value. We will return your product, transportation charges prepaid provided it is delivered prepaid to Formula Brands Inc. Any and all remedies relating to this warranty are limited to the amount of the purchase price of the product. This warranty extends only to the original purchaser, consumer or gift recipient.

This warranty does not cover failure caused by food build-up, water deposits, normal cosmetic discoloration, and inadequate maintenance of the product. This warranty will not cover damage or failure to function if the product has been dismantled or tampered with, if it has been damaged due to exposure to water or any other liquid, if it is not used in conformity with the printed directions of this product or if it has been accidentally or intentionally damaged.

This warranty does not cover the following parts which may be supplied with the appliance: plastic parts, glass parts, glass containers, ceramic containers, cutter/strainer, filters or nonstick surfaces.

This product is intended for use in a single-family household. This warranty will become null and void if the product is used for commercial purposes or any other purpose other than for single-family household use.

We exclude all claims for special, incidental and consequential damages caused by breach of any express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

TO RETURN FOR SERVICE:

1. Securely package and return the product PREPAID to:
FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4

NOTE: We recommend you insure your parcel for your protection.


2. Please enclose your name, return address, postal code, telephone number and a description of the defect.
3. To ensure prompt 'In-Warranty' service, be sure to include a proof of purchase (a copy of your store receipt).
4. For repairs not covered under warranty, you will be advised of the cost of the repair in advance, and upon receipt of your cheque or money order the repairs will be completed and the product returned to you.

If at any time you order parts or inquire about service, please quote the "MODEL NUMBER" stamped on the appliance nameplate.

For assistance regarding this appliance, please call
1-877-244-1110
between 9:00 am and 5:00 pm (EST) Monday to Friday
or write
FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4
or email:
customerservice@formulabrands.com

© General Mills. Betty Crocker and designs are trademarks of General Mills used under license.

REPLACEMENT PARTS

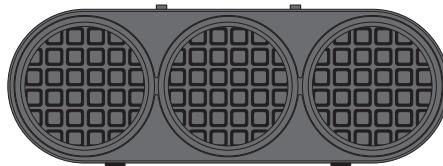

Nonstick Waffle Plate (1)

PLEASE WRITE MODEL NUMBER HERE:

If you would like to order replacement or spare parts for this appliance, please complete and mail this form, along with a cheque or money order made payable to:

FORMULA BRANDS INC.
Parts Department
45 Mural Street, Unit #7,
Richmond Hill, Ontario, Canada
L4B 1J4

NAME

ADDRESS

CITY

Prices are subject to change without notice

Prices are subject to change without notice

PLEASE NOTE: WHEN ORDERING FROM USA AN 'INTERNATIONAL' MONEY ORDER MUST BE USED

* Shipping costs may vary based on fuel surcharges and postage rates. Please call toll-free 1-877-244-1110 or email customerservice@formulabrands.com to confirm shipping and handling charges.



Allow 3 to 6 weeks
for delivery.

BC-5886R
08/25

