



Betty Crocker™

1.7 LITRE
Kettle



HOUSEHOLD USE ONLY

BC-4704W

Table of Contents

Important Safeguards	3
Before Your First Use.....	5
Know the Parts of Your Kettle.....	6
Using Your Kettle	7
Cleaning Your Kettle	8
Cleaning The Scale Filter.....	8
Descaling	9
Limited Warranty.....	10
To Return For Service	11
Replacement Parts.....	12

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

1. **Read all instructions carefully before use.**
2. Do not touch hot surfaces. Use handle.
3. To protect against fire, electric shock and injury to persons, do not immerse cord, plug or kettle in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
5. Unplug from outlet when not in use and before cleaning.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, lift power switch to "OFF", then remove plug from wall outlet.

12. Extreme caution must be used when moving this appliance containing hot water.
13. Always close the lid of the kettle when in use. Scalding may occur if the lid is lifted or removed during boiling cycle.
14. Do not use appliance for other than intended use.
15. Do not use a cracked container or container that has a loose or weakened handle.
16. Do not clean unit with scouring powders, steel wool pads, or other abrasive materials.
17. Do not twist, kink or wrap the power cord around the appliance as this may cause the insulation to weaken and split, particularly in the location where it enters the unit.
18. **Do not leave appliance unattended while in use.**

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

POWER CORD INSTRUCTIONS

1. A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a long cord.
2. Extension cords may be used if care is exercised. If it is necessary to use an extension cord, it should be positioned so that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over unintentionally.
3. The electrical rating of the extension cord must be the same or more than the wattage of the appliance (the wattage is shown on the rating label located on the underside or back of the appliance).
4. Use only 3-wire extension cord with a 3-prong grounded plug.
5. Avoid pulling or straining the power cord at outlet or appliance connections.

GROUNDING PLUG

1. This appliance is equipped with a 3-wire cord having a grounded plug.
2. To reduce the risk of injury this plug must be inserted into a properly installed and grounded outlet.
3. Do not attempt to defeat this safety feature by modifying the plug in any way.

WARNING: Improper use of the power cord may result in the risk of electric shock. Consult a qualified electrician if necessary.

Before Your First Use


Carefully unpack the kettle and remove all packaging materials. To remove any dust that may have accumulated during packaging, rinse the interior of the jug with warm water.

Once you have read and understood the manual, fill the kettle with water to the MAX line. Bring to a boil. After the water has boiled, pour out and discard. Your kettle is now ready for use.

WARNING: Do not immerse the kettle, cord or plug in water or any other liquid. Do not use harsh detergents or abrasive cleansers.

IMPORTANT: Use only cold water for heating. Do not use harsh detergents or abrasive cleansers.

Know the Parts of Your Kettle

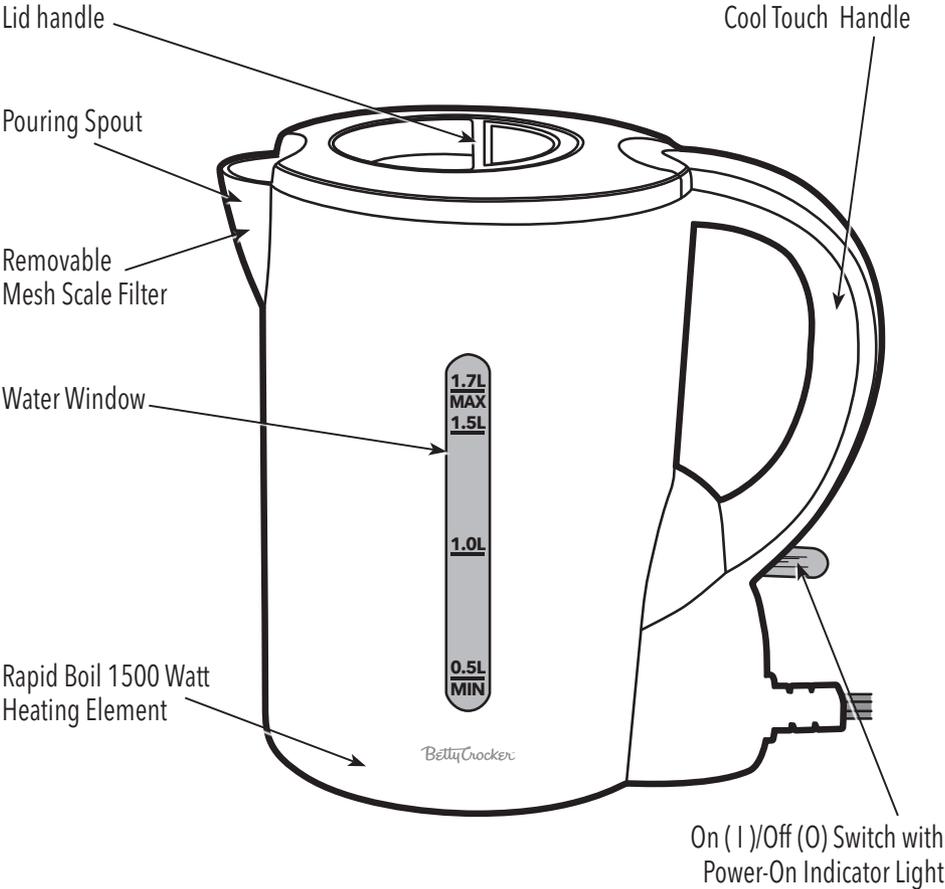

RATING: 120V, 60Hz, 1500 WATTS, AC ONLY

Using Your Kettle

WARNING: Do not use the kettle without the filter properly in place. If your kettle is used without the filter, it will not automatically shut off after boiling (refer to "Cleaning the Scale Filter" on page 8 for instructions on how to properly install your scale filter).

1. Always be sure your kettle is unplugged when you're filling or adding more water to it.
2. Fill the kettle with cold water to the desired level. Do not overfill, as this may cause spilling or sputtering. You can fill the kettle through the pouring spout or by opening the lid.
3. Close the lid and snap down to lock it after filling, to ensure that the kettle will shut off after boiling. The lid will lock into position when it is firmly pressed.
4. To prevent the kettle from boiling dry, do not fill it with less than 2 cups (500 mL/17oz) of water. The minimum water level is marked on the water gauge as "MIN."
5. Do not fill the kettle with more than 1.7 L (57 fl oz) of water. The maximum water level is marked on the water gauge as "MAX."

NOTE: Your kettle has an automatic shut-off safety feature that protects against overheating. It will operate if the kettle is switched on when it does not contain enough water. If the automatic safety shut-off has occurred, switch the kettle off, unplug it from the power outlet and allow it to cool for 5-10 minutes. Then, refill the kettle with sufficient water and switch it on. The kettle will now boil and shut off as usual.

6. Plug the cord into a grounded power outlet and switch it on by moving the ON/OFF switch into the ON (I) position.
7. When the water has boiled, the kettle will shut off automatically. After allowing the kettle to cool down for 15-20 seconds, the water can be brought back to a boil by pushing the on/off switch back into the ON (I) position.

Cleaning Your Kettle

Wipe the exterior of the kettle with a soft, damp cloth or sponge. Remove stubborn spots by using a cloth moistened with mild liquid detergent. Do not use abrasive scouring pads or powders. Never immerse the kettle in water or any other liquid. Polish with a soft, dry cloth.


Depending on the hardness of your water supply and how often you use the kettle, a limescale deposit may form. This will reduce the kettle's heating capacity. Limescale is not harmful to your health, but it may give your beverages an unpleasant appearance or taste. Your kettle should be descaled on a monthly basis to lengthen the life of the kettle, maintain the energy efficiency and ensure a clean appearance.

Cleaning The Scale Filter

After some time, the scale filter in the pouring spout may become clogged. When this occurs, the scale filter should be cleaned. To clean the scale filter, use a soft-bristled brush under warm running water. Then follow the directions in the "Descaling" section.


TO REMOVE THE SCALE FILTER

1. Open the kettle lid.
2. Gently ease the scale filter out of the housing by gripping the top of the scale filter and pull it upwards to remove.

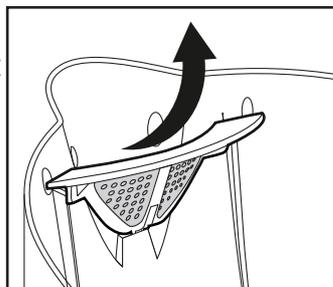

TO REPLACE THE SCALE FILTER

1. Open the kettle lid.
2. Line up the ends of the scale filter with the grooves on the inside of the pour spout, and gently lower the scale filter into place, ensuring the bottom tab of the filter is aligned with the grooves on the interior of the kettle.

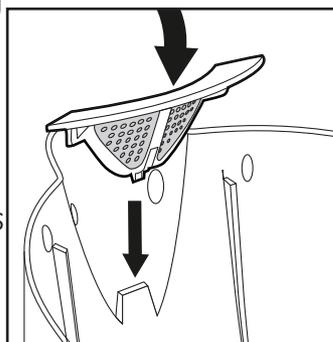

NOTE: Filters must be replaced if damaged or showing signs of wear and tear. Replacement filters can be ordered through the order form found on page 12.

Descaling

Your kettle should be descaled on a monthly basis to lengthen the life of the kettle, maintain the energy efficiency and ensure a clean appearance.

1. Fill the kettle up to the "MAX" level with a mixture of one part white vinegar and two parts water. Switch on and wait for the kettle to switch off automatically. Unplug the cord from the outlet.
2. Let the mixture remain inside the kettle overnight.
3. Throw the mixture away the next morning.
4. Fill the kettle with clean, cold water up to the "MAX" level, plug in cord and bring to a boil.
5. Discard this boiled water and any remaining scale and vinegar.
6. Rinse the inside of the kettle with clean water.
7. The kettle is now ready to be used.

WARNING: Your kettle has been designed for BOILING WATER ONLY. Boiling any other liquid can cause severe damage to the kettle and possible personal injury and voids the warranty.

**IMPORTANT:
Failure to properly descale your kettle as outlined in this manual will automatically void the warranty.**

NEVER LEAVE APPLIANCE UNATTENDED WHILE IN USE.

LIMITED WARRANTY ONE (1) YEAR

This warranty is the only warranty for this product. This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase, as evidenced by the receipt of purchase, and provided it is used for the purpose for which the product is intended. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option. If the product should become defective within the warranty period, we will repair it or replace it free of charge. If the product or component is no longer available, we will replace with a similar one of equal or greater value. We will return your product, transportation charges prepaid provided it is delivered prepaid to Formula Brands Inc. Any and all remedies relating to this warranty are limited to the amount of the purchase price of the product. This warranty extends only to the original purchaser, consumer or gift recipient.

This warranty does not cover failure caused by food build-up, water deposits, normal cosmetic discoloration, and inadequate maintenance of the product. This warranty will not cover damage or failure to function if the product has been dismantled or tampered with, if it has been damaged due to exposure to water or any other liquid, if it is not used in conformity with the printed directions of this product or if it has been accidentally or intentionally damaged.

This warranty does not cover the following parts which may be supplied with the appliance: plastic parts, glass parts, glass containers, ceramic containers, cutter/strainer, filters or non-stick surfaces.

This product is intended for use in a single-family household. This warranty will become null and void if the product is used for commercial purposes or any other purpose other than for single-family household use.

We exclude all claims for special, incidental and consequential damages caused by breach of any express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

BC-4704W
07/2025

TO RETURN FOR SERVICE:

1. Securely package and return the product PREPAID to:
FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4

NOTE: We recommend you insure your parcel for your protection.


2. Please enclose your name, return address, postal code, telephone number and a description of the defect.
3. To ensure prompt 'In-Warranty' service, be sure to include a proof of purchase (a copy of your store receipt).
4. For repairs not covered under warranty, you will be advised of the cost of the repair in advance, and upon receipt of your cheque or money order the repairs will be completed and the product returned to you.

If at any time you order parts or inquire about service, please quote the "MODEL NUMBER" stamped on the appliance nameplate.

For assistance regarding this appliance, please call
1-877-244-1110
between 9:00 am and 5:00 pm (EST) Monday to Friday
or write
FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4
or email:
customerservice@formulabrands.com

© General Mills. Betty Crocker and designs are trademarks of General Mills used under license.

REPLACEMENT PARTS

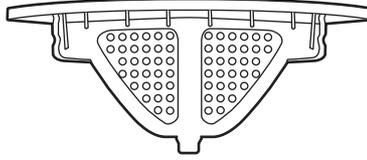

Removable Mesh Scale Filter

PLEASE WRITE MODEL NUMBER HERE:

PART	QTY	PRICE	TOTAL
Removable Mesh Scale Filter		\$1.00	
TOTAL			
SHIPPING AND HANDLING TO CANADA:			\$9.00*
SHIPPING AND HANDLING TO USA:			\$15.00*
SUBTOTAL			
ADD 13% H.S.T. - CANADA ONLY			
		TOTAL	

If you would like to order replacement or spare parts for this appliance, please complete and mail this form, along with a cheque or money order made payable to:

FORMULA BRANDS INC.
 Parts Department
 45 Mural Street, Unit #7,
 Richmond Hill, Ontario,
 Canada L4B 1J4

NAME _____

ADDRESS _____

CITY _____

PROVINCE/STATE _____

POSTAL/ZIP CODE _____

Prices are subject to change without notice.

PLEASE NOTE: WHEN ORDERING FROM USA, AN 'INTERNATIONAL' MONEY ORDER MUST BE USED.

* Shipping costs may vary based on fuel surcharges and postage rates. Please call toll-free 1-877-244-1110 or email customerservice@formulabrands.com to confirm shipping and handling charges.



Allow 3 to 6 weeks
for delivery.

BC-4704W
07/25