



Betty Crocker™ Food Chopper

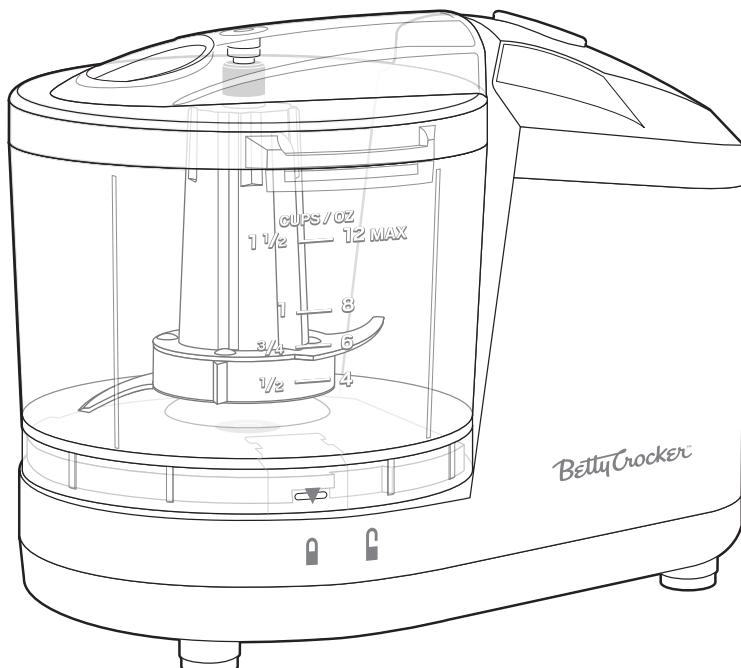


Table of Contents

Important Safeguards	3
Before First Use	5
Know your Food Chopper	6
Assembling your Food Chopper	7
Using your Food Chopper	8
Chopping Guide	9
Cleaning your Food Chopper	10
Limited Warranty	11
To Return for Service:	12
Replacement Parts	13

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

1. **Read all instructions carefully before use.**
2. To protect against risk of electric shock, do not put base, cord or plug in water or other liquids.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting or taking off parts, and before cleaning. To disconnect, grasp plug and pull from electrical outlet. Never yank on cord.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
10. Keep hands and utensils away from cutting blades while chopping food to reduce the risk of severe injury to persons or damage to the food chopper. A food scraper may be used, but only when the food chopper is not running.
11. Blades are sharp. Handle carefully.
12. To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.

13. Be certain lid is securely locked in place before operating appliance.
14. Do not attempt to defeat the cover interlock mechanism.
15. Do not use this appliance for other than intended use.
16. Do not twist, kink or wrap the power cord around the appliance as this may cause the insulation to weaken and split, particularly in the location where it enters the unit.
17. **Never leave appliance unattended while it is plugged into an outlet.**

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

POWER CORD INSTRUCTIONS

1. A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a long cord.
2. Extension cords may be used if care is exercised. If you must use an extension cord, it should be positioned so that it does not drape over the counter or tabletop where it can be pulled on or tripped over by children.
3. The electrical rating of the extension cord must be equal to or greater than the rating of this appliance. The label with the electrical rating is located on the underside of the appliance.
4. Avoid pulling or straining the power cord at outlet or appliance connections.

POLARIZED PLUG

1. This appliance has a polarized plug (one blade is wider than the other).
2. To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way.
3. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, please contact a qualified electrician. Do not attempt to modify the plug in any way.

WARNING: Improper use of the power cord may result in the risk of electric shock. Consult a qualified electrician if necessary.

Before Your First Use


Be sure to read this book in its entirety, paying special attention to the sections on "Assembling your Food Chopper" and "Care and Cleaning" to learn the correct methods for assembling and cleaning the unit.

Carefully unpack the product and remove all packaging materials. Wash the bowl, lid and stainless steel blade in warm, soapy water. You may wipe the base with a clean, damp cloth.

CAUTION: Handle blades carefully; they are sharp. Always handle blades by the central plastic hub.

WARNING: Do not immerse the base, cord or plug in water or other liquid. Do not use harsh detergents or abrasive cleaners on any part of your food chopper.


Know the Parts of Your Food Chopper

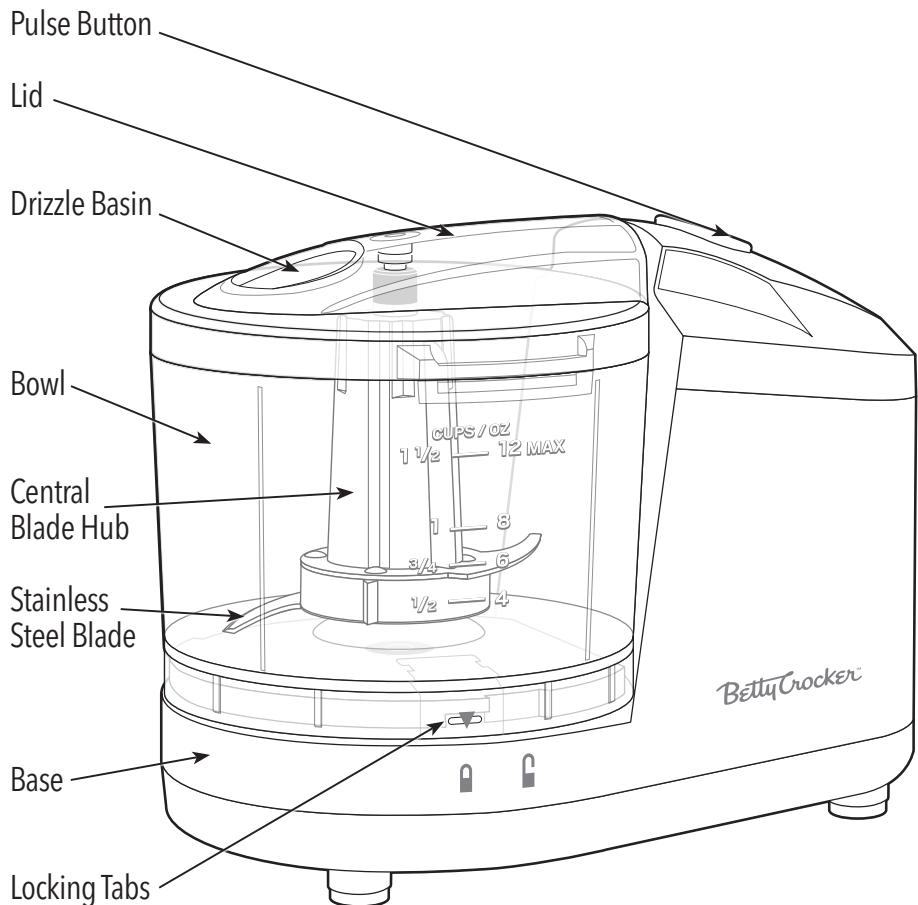

RATING: 120V, 60Hz, 100W, AC ONLY


Assembling Your Food Chopper

1. Be sure the unit is unplugged before assembly. Place the base of the unit on a flat, clean, dry counter or tabletop.
2. Place the bowl on the base, lining up the locking tabs on the bowl with the locking tabs on the base. Turn the bowl clockwise, as indicated by the arrow icons until the bowl locks into place and the arrow icons are aligned.
3. Place the blade over the center post in the bowl.

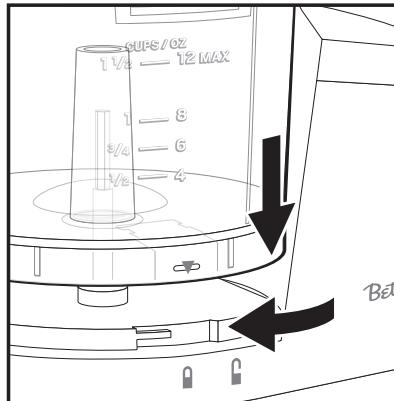

CAUTION: The blade is very sharp; handle by central hub only.

4. Place the lid onto the bowl so the extended tab of the lid will fit into the slot at the top of the base. Turn the lid clockwise, as indicated by the arrows until it locks into place and the arrows are aligned. Your food chopper is now ready to use.

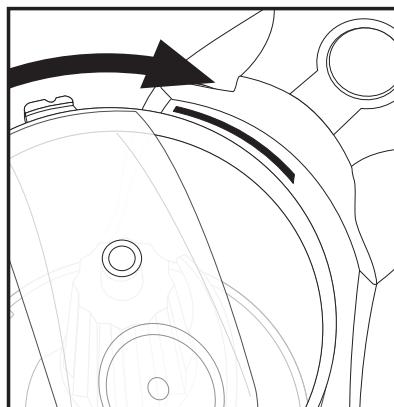

IMPORTANT: For your protection, this unit has been designed with a safety interlock system. The chopper will not operate unless the tab on the lid is correctly located inside the slot of the base. Do not attempt to operate this unit without the lid correctly in place, or if the tab is broken.

CAUTION: DO NOT place any parts in microwave.

Using Your Food Chopper

Before using your chopper, ensure that the unit is assembled correctly.

WARNING: Blades are sharp - handle with care.

1. Place the base of the unit on a flat, clean, dry counter or tabletop. Plug the unit into a working 120 volt 60Hz AC outlet. Arrange cord so it does not drape over countertop or tabletop where it can be pulled on by children or tripped over accidentally.
2. Your chopper has been designed to process 175 mL (3/4 cup) of dry food at a time. If you need to process more than this, simply do several batches. It is recommended that most foods be cut into small pieces (1.5 cm / 1/2 in). Place the food in the bowl. Place the lid on the bowl and lock in place.
3. Press the "Pulse" button and hold down for several seconds. Release the "Pulse" button and the motor will stop. You will be able to examine the food's consistency through the transparent bowl. If more processing is required, simply press the "Pulse" button for a few more seconds. Be careful not to over process, as most foods will only require several seconds.

This appliance is designed for "Pulse operation".

**Do not operate motor continuously for longer than one minute.
Allow to rest for 3 minutes before using again.**

4. If your chopper does not operate, refer to the section on "Assembling your Food Chopper". Check that the locking tabs on the bowl and the extended tab on the lid are properly assembled.
5. To add liquid ingredients while processing without having to disassemble the unit, slowly pour liquid directly into the drizzle basin. This is a useful feature when making sauces, dressings, mayonnaise, etc.
6. Once the food has reached the desired consistency, release the "Pulse" button and the blade will stop rotating.



- Once the chopping blades have come to a complete stop, unplug the unit and remove the lid. Carefully remove the blade from the bowl by handling it by the central hub. Remove the bowl from the base and empty the contents. A spatula may be used if necessary.

CAUTION: Do not chop hard foods that cannot be easily sliced with a normal kitchen knife or foods that contain pits, stones, bones or hard shells as this may damage the chopper.

Do not attempt to mix liquids as leakage can occur.

This unit is NOT INTENDED to chop or crush ice cubes.

Chopping Guide

Carrots	Cut into 2 cm (3/4 in) pieces, place no more than 175 mL (3/4 cup) in bowl at a time.
Celery	Cut into 1 cm (1/2 in) pieces, place no more than 175 mL (3/4 cup) in bowl at a time.
Cheese	Cut into 1 cm (1/2 in) pieces, place no more than 175 mL (3/4 cup) in bowl at a time.
Chocolate	Place up to 175 mL (3/4 cup) of chocolate chips in bowl at a time.
Eggs	Place no more than 2 peeled and quartered hard-cooked eggs in bowl at a time.
Garlic	Place no more than 8 peeled cloves in bowl.
Meats	Do not process raw meat. Cut cooked meat into 1 cm (1/2 in) pieces. Place up to 175 mL (3/4 cup) in bowl at a time.
Nuts	Place up to 125 mL (1/2 cup) of nuts in bowl at a time.
Onions	Place 1 medium or 2 small peeled and quartered onions in bowl at a time.
Parsley	Cut off the stems, place no more than 175 mL (3/4 cup) of clean dry packed parsley in bowl at a time.

Cleaning your Food Chopper

Other than the care and cleaning procedures mentioned in this manual, no other servicing or maintenance of this unit is necessary. Any other servicing must be performed by an authorized service representative.

Always ensure that the chopper is unplugged before cleaning.

To make cleaning easier, rinse removable parts immediately after processing.

NOTE: Some foods and spices will discolour the bowl, lid and/or the central blade hub.

Wipe the body of the base with a clean, damp cloth. Allow to air dry thoroughly. Wash the bowl, lid, and stainless steel blade in warm, soapy water. Rinse and dry thoroughly.

NOTE: With prolonged use, the plastic components may deteriorate through the use of a dishwasher for cleaning. We recommend hand washing to prolong the life of your food chopper.

WARNING: Blades are sharp - handle with care.

Do not use abrasive detergents, harsh cleansers or scouring pads on any part of the chopper. If necessary, a small nylon bristle brush may be used.

Do not fill the bowl with boiling water or place any of the parts in boiling water. Do not allow blade to soak in water for extended periods of time.

CAUTION: Do not immerse the base, cord or plug in water or any other liquid.

IMPORTANT: Do not attempt to sharpen the cutting edge of the chopping blade. It has been precision honed at the factory and will be damaged by any attempted sharpening.

LIMITED WARRANTY ONE (1) YEAR

This warranty is the only warranty for this product. This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase, as evidenced by the receipt of purchase, and provided it is used for the purpose for which the product is intended. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option. If the product should become defective within the warranty period, we will repair it or replace it free of charge. If the product or component is no longer available, we will replace with a similar one of equal or greater value. We will return your product, transportation charges prepaid provided it is delivered prepaid to Formula Brands Inc. Any and all remedies relating to this warranty are limited to the amount of the purchase price of the product. This warranty extends only to the original purchaser, consumer or gift recipient.

This warranty does not cover failure caused by food build-up, water deposits, normal cosmetic discoloration, and inadequate maintenance of the product. This warranty will not cover damage or failure to function if the product has been dismantled or tampered with, if it has been damaged due to exposure to water or any other liquid, if it is not used in conformity with the printed directions of this product or if it has been accidentally or intentionally damaged.

This warranty does not cover the following parts which may be supplied with the appliance: plastic parts, glass parts, glass containers, ceramic containers, cutter/strainer, filters or non-stick surfaces.

This product is intended for use in a single-family household. This warranty will become null and void if the product is used for commercial purposes or any other purpose other than for single-family household use.

We exclude all claims for special, incidental and consequential damages caused by breach of any express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

TO RETURN FOR SERVICE:

1. Securely package and return the product PREPAID to:
FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4

NOTE: We recommend you insure your parcel for your protection.


2. Please enclose your name, return address, postal code, telephone number and a description of the defect.
3. To ensure prompt 'In-Warranty' service, be sure to include a proof of purchase (a copy of your store receipt).
4. For repairs not covered under warranty, you will be advised of the cost of the repair in advance, and upon receipt of your cheque or money order the repairs will be completed and the product returned to you.

If at any time you order parts or inquire about service, please quote the "MODEL NUMBER" stamped on the appliance nameplate.


For assistance regarding this appliance, please call
1-877-244-1110
between 9:00 am and 5:00 pm (EST) Monday to Friday
or write
FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4
or email:
customerservice@formulabrands.com

© General Mills. Betty Crocker and designs are trademarks of General Mills used under license.


REPLACEMENT PARTS

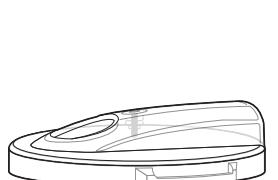

Lid

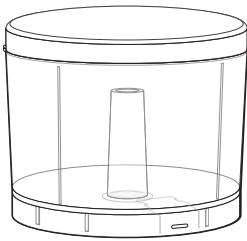

Bowl

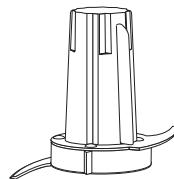

Blade

PLEASE WRITE MODEL NUMBER HERE:

PART	QTY	PRICE	TOTAL
Stainless Steel Blade		\$8.99	
Lid		\$1.99	
Bowl		\$7.99	
TOTAL			
SHIPPING AND HANDLING TO CANADA:		\$9.00*	
SHIPPING AND HANDLING TO USA:		\$15.00*	
SUBTOTAL			
ADD 13% H.S.T. - CANADA ONLY			
		TOTAL	

If you would like to order replacement or spare parts for this appliance, please complete and mail this form, along with a cheque or money order made payable to:

FORMULA BRANDS INC.
45 Mural Street, Unit #7,
Richmond Hill, Ontario, Canada
L4B 1J4

NAME _____

ADDRESS _____

CITY _____

PROVINCE/STATE _____

POSTAL/ZIP CODE _____

Prices are subject to change without notice.

PLEASE NOTE: WHEN ORDERING FROM USA, AN 'INTERNATIONAL' MONEY ORDER MUST BE USED.



Allow 3 to 6 weeks
for delivery.

* Shipping costs may vary based on fuel surcharges and postage rates. Please call toll-free 1-877-244-1110 or email customerservice@formulabrands.com to confirm shipping and handling charges.

BC-5403W
07/25

