


SET UP INSTRUCTIONS

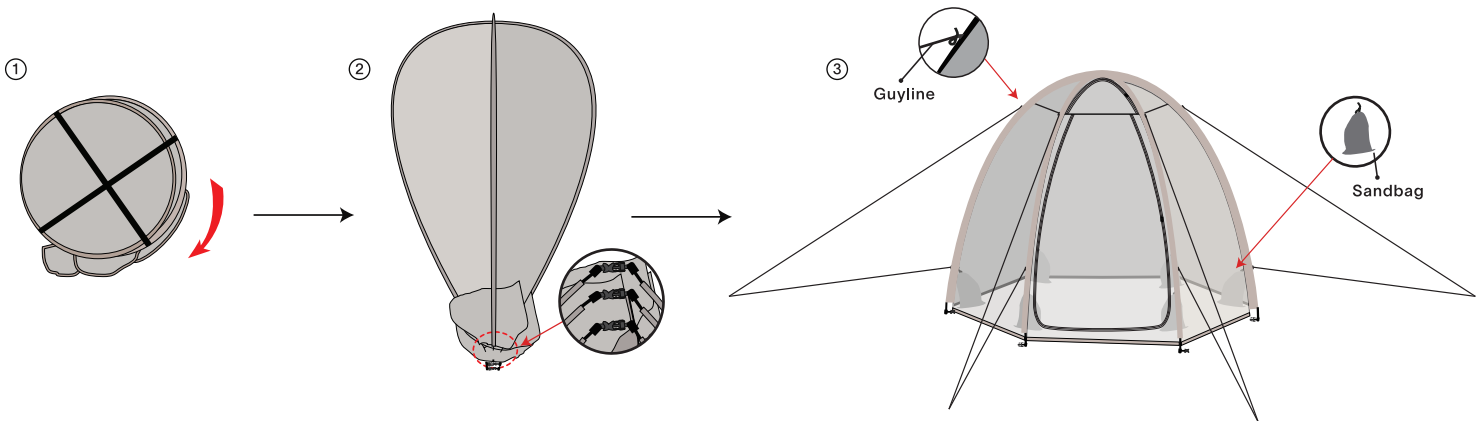


Slide the black band off.
(Store the band somewhere
you will remember. You will
need the band when folding
the tent later).

Unfasten three buckles at
ends of three arc pole sleeves.


Use sandbags and guylines to strengthen the tent.
Pull all top and bottom guylines in right angles
to get 360 degrees stability protection.

TAKE DOWN INSTRUCTIONS

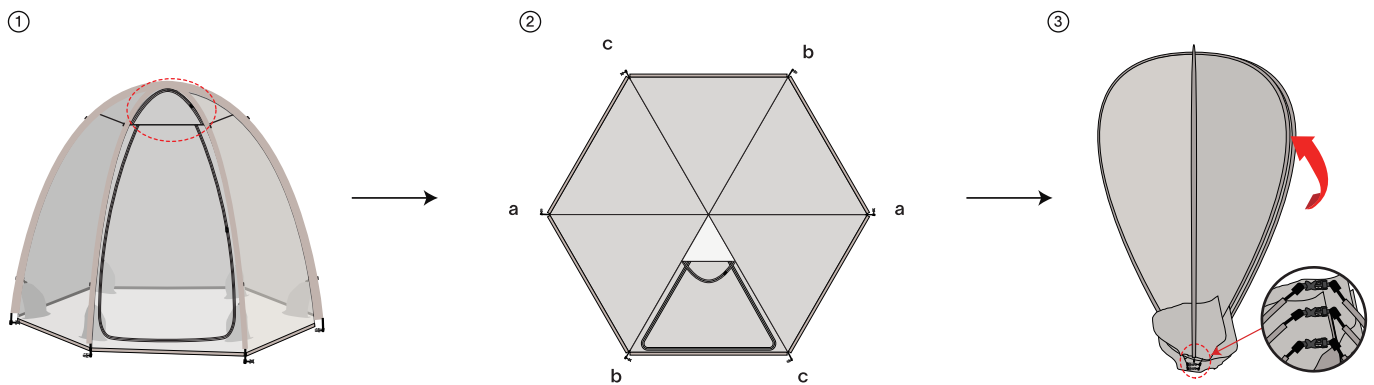

Unzip the window above the
door panel to allow the top
poles fold together.

Fasten three buckles at two
cross ends of each pole (a-a, b-b, c-c)
to become three arc circles.

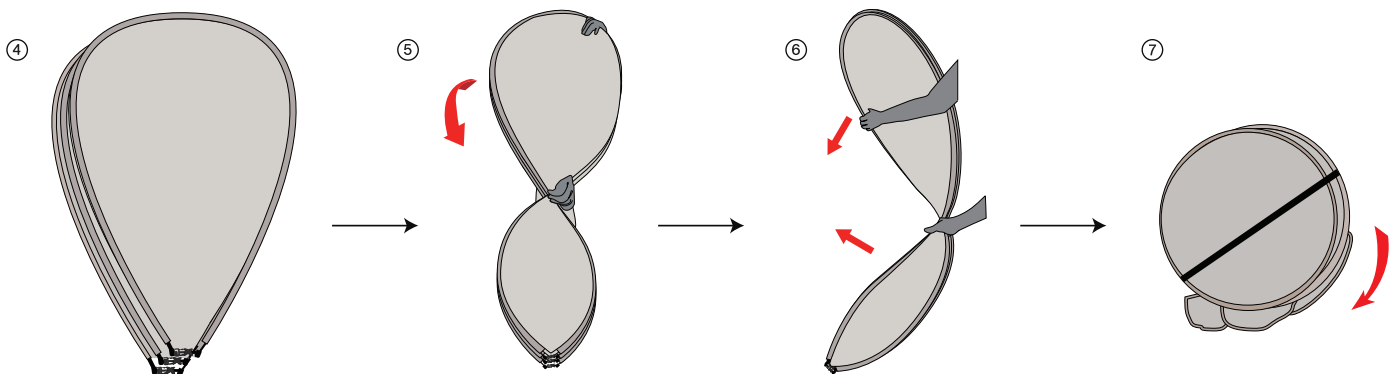

Place three arc circles flat.

Twist it into an 8 shape.

Fold two sets of small circles
face to face together.

Slide the band around the tent
to hold the folded tent, then
put it into the carry bag.