



Betty Crocker™ Iced Coffee Maker



HOUSEHOLD USE ONLY

BC-4869B

Table of Contents

Important Safeguards	3
Before Your First Use.....	6
Know the Parts of Your Iced Coffee Maker	7
Using Your Iced Coffee Maker	8
Helpful Hints.....	9
Decalcifying	9
Warranty	10
To Return For Service	11
Replacement Parts.....	12

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

1. **Read all instructions carefully before use.**
2. To protect against electric shock, do not immerse cord, plug, or unit in water or any other liquid.
3. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
4. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
6. Do not use this appliance for anything other than its intended use.
7. Do not touch hot surfaces. Use handles or knobs.
8. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury, and will void warranty.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.

12. Coffee Maker must be used on a flat surface away from the edge of counter to prevent accidental tipping.
13. Do not clean the Coffee Maker with scouring powders, steel wool pads, or other abrasive materials.
14. Do not overfill the water reservoir with water.
15. Use only water in this appliance. Do not put any other liquids or foods in the water reservoir except as instructed in this user guide.
16. To disconnect, turn any control to the off position, then remove plug from wall outlet.
17. All lids should be closed during use. The unit may emit steam while brewing or while contents are hot. To avoid steam burns, keep away from steam. Open lid away from hands and face.
18. Never lift lid during brewing cycle as hot water will spray from the shower head and scalding may occur. Contents may be hot. Allow to cool before opening the lid.
19. Do not twist, kink or wrap the power cord around the appliance, as this may cause the insulation to weaken and split, particularly in the location where it enters the unit.
20. **WARNING:** To reduce the risk of fire or electric shock, do not remove any service covers. There are no user serviceable parts inside the coffee maker. Only authorized personnel should repair the coffee maker.
21. **Do not leave appliance unattended while in use.**

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

POWER CORD INSTRUCTIONS

1. A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a long cord.
2. Extension cords may be used if care is exercised. If it is necessary to use an extension cord, it should be positioned so that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over unintentionally.
3. The electrical rating of the extension cord must be the same or more than the wattage of the appliance (the wattage is shown on the rating label located on the underside or back of the appliance).
4. Avoid pulling or straining the power cord at outlet or appliance connections.

POLARIZED PLUG

1. Your appliance is equipped with a polarized plug (one blade is wider than the other).
2. To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.
3. If the plug does not fit fully into the outlet, reverse the plug. If it does not fit, please consult a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.

WARNING: Improper use of the power cord may result in electric shock. Consult a qualified electrician if necessary.

Before Your First Use

Carefully unpack the iced coffee maker and remove all packaging materials. To remove any dust that may have accumulated during packaging, wash the removable components with warm, soapy water. Rinse and dry thoroughly. Do not use harsh or abrasive cleansers on any part of the iced coffee maker. You may wipe the main body with a clean, damp cloth. Dry thoroughly.

Do not immerse the main body of the iced coffee maker, cord or plug in water or any other liquid.


WARNING: To prevent injury from hot steam or potential damage to the unit, do not plug the unit in until the water is in the reservoir and the tumbler is in position under the brew spout. DO NOT attempt to pause in the middle of brewing cycle, wait until the brewing cycle completes and dripping stops. If unit is unplugged during a brewing cycle, note that the unit will continue its' brewing cycle once it is plugged back in.

Never open lid to unit prior to allowing unit to cool down for a few minutes.

IMPORTANT: Use only cold water – the automatic brewing system has been designed to work only with cold water.

1. Wash the tumbler, lid, straw, coffee filter and brew basket with warm, soapy water. Rinse and dry thoroughly.
2. Start with the unit unplugged.
3. Open the top lid of the coffee maker and remove the brew basket. Fill the tumbler with water to the "WATER" line and pour into the water reservoir.
4. Replace the brew basket on top of the water reservoir and place the coffee filter into the brew basket.
5. Close the lid and turn the knob to REGULAR. Place the tumbler under the brew spout. Do not turn the knob to NO DRIP (滗) position, it can cause leaking during the brewing cycle and possibly clogging the coffee filter inside the brew basket.
6. Plug in the unit and press START. The Power light turns on.
7. Wait until the brewing cycle completes and dripping stops. The unit will turn off automatically once brewing is complete. During brewing cycle, you can only unplug the unit to pause brewing.
8. When brewing is complete, and the dripping stops, turn the knob to the NO DRIP (滗) position. Throw out the water from the tumbler and rinse thoroughly with clean water.
9. Your iced coffee maker is now ready for use.

Know the Parts of Your Iced Coffee Maker

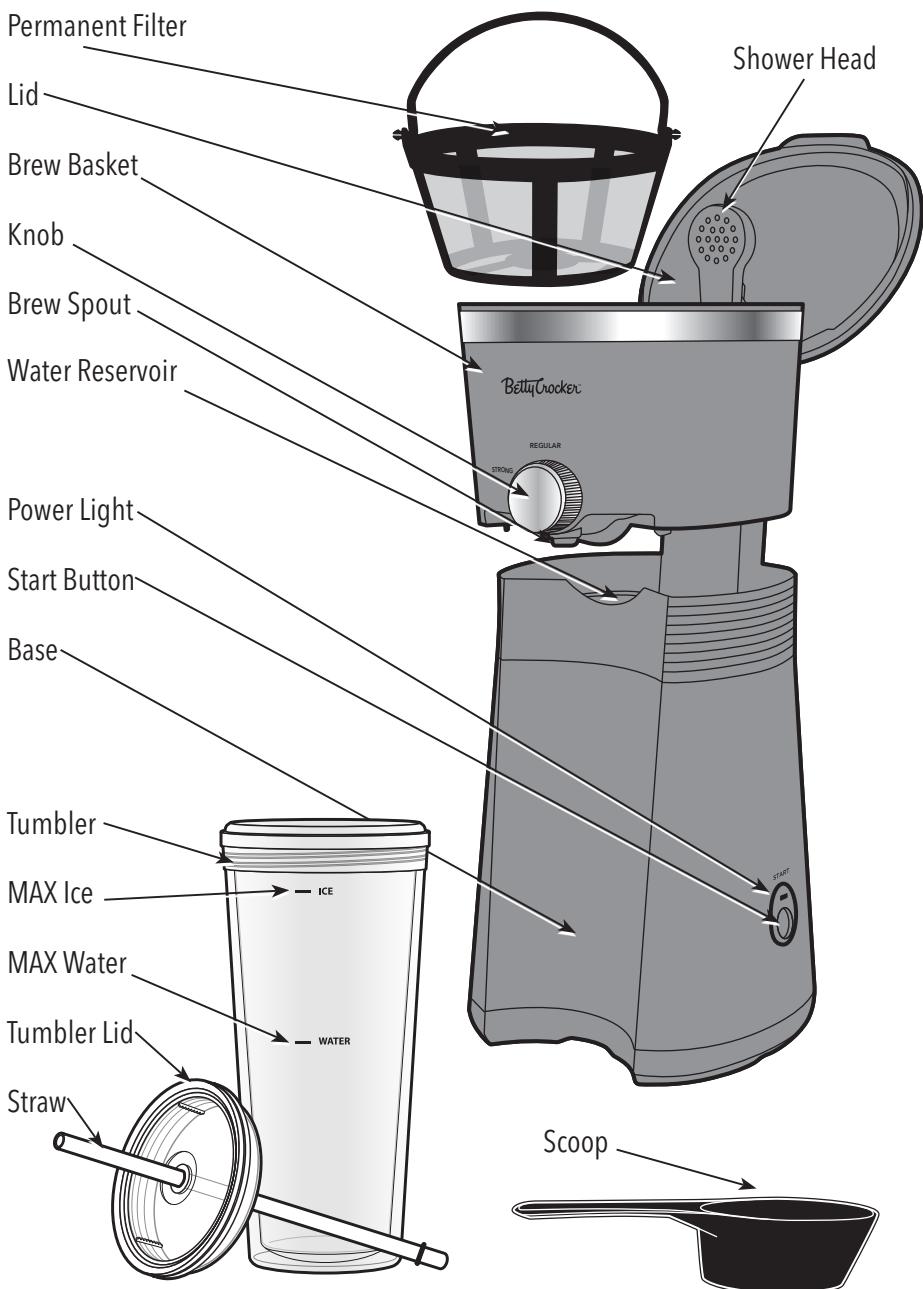

RATING: 120V, 60Hz, 700 WATTS, AC ONLY

Using Your Iced Coffee Maker

WARNING: To prevent injury from hot steam or potential damage to the unit, do not plug the unit in until the water is in the reservoir and the tumbler is in position under the brew spout. DO NOT attempt to pause in the middle of brewing cycle, wait until the brewing cycle completes and dripping stops. If unit is unplugged during a brewing cycle, note that the unit will continue its' brewing cycle once it is plugged back in. Never open lid to unit prior to allowing unit to cool down for a few minutes.

IMPORTANT: Use only cold water – the automatic drip brewing system has been designed to work only with cold water.

1. Place the coffee maker on a flat, heat-resistant, dry surface, such as a countertop.
2. Open the top lid of the coffee maker and remove the brew basket.
3. Fill the tumbler to the "WATER" line with clean cold water and pour into the reservoir. Note: Do not overfill water in the reservoir beyond the MAX line.
4. Replace the brew basket on top of the water reservoir and place the filter into the brew basket. A 12-cup paper basket filter can be used instead of the permanent filter.
5. Use the scoop included to measure 1 scoop of coffee grounds into the filter for REGULAR. For strong coffee, use 1½ - 2 scoops. You can always adjust the coffee grounds amount and strength to your liking.
6. Close the lid and turn the knob to REGULAR or STRONG, to suit your taste.
7. Fill the tumbler with ice cubes to the "ICE" line and place the tumbler under the brew spout.
8. Plug the power cord in and press the START button. The Power light turns on and brewing begins.
9. Brewing completes in 3-4 minutes. When the dripping stops, turn the knob to the NO DRIP (▢) position. Allow unit to cool down for a few minutes, prior to opening lid to remove filter.
10. Take the tumbler, insert the straw into the lid, securely screw the lid onto the tumbler. Enjoy your iced coffee.

Helpful Hints

IMPORTANT: After brewing, when dripping stops, turn the knob to the NO DRIP (�) position. Unplug your unit, allow it to cool down for a few minutes, before brewing your next cup.

Should you notice that the coffee is weak tasting, or notice a change in taste, it may indicate it is time to clean the unit. If the water tank is full and coffee is not coming out of the coffee maker, it may indicate that there is a limescale build-up in the unit. Follow instructions in the "Decalcifying" section.

Decalcifying

Calcium build-up frequently occurs in coffee makers. This build-up is quite normal and is caused by minerals commonly found in drinking water. **Your coffee maker will need to be descaled at least every 2 months to remove any calcium or mineral deposits that might have formed.**

We recommend decalcifying your iced coffee maker with a solution of regular white vinegar and cold water. Mix equal parts vinegar (5 oz) and water (5 oz) and pour it into the water reservoir. Do NOT overfill beyond the MAX line. Insert the permanent filter, or a 12-cup paper basket filter, into the brew basket and close the hinged lid and put the empty tumbler under the brew sprout. Turn the knob to REGULAR and press START. When the vinegar solution has finished "brewing", empty the tumbler and rinse it out with clean water.

After allowing unit to cool down for a few minutes, refill your tumbler with clean, cold water to the WATER line, then pour into the water reservoir. Place the tumbler under the brew sprout, press START to run a second "BREW" cycle. This will rinse out any remaining vinegar solution. If necessary, you may want to repeat this last step.

The frequency of decalcifying will depend on the hardness of your water. In normal water conditions, we suggest decalcifying your iced coffee maker every 2 months. In hard water conditions, we suggest decalcifying your iced coffee maker every month.

LIMITED WARRANTY ONE (1) YEAR

This warranty is the only warranty for this product. This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase, as evidenced by the receipt of purchase, and provided it is used for the purpose for which the product is intended. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option. If the product should become defective within the warranty period, we will repair it or replace it free of charge. If the product or component is no longer available, we will replace with a similar one of equal or greater value. We will return your product, transportation charges prepaid provided it is delivered prepaid to Formula Brands Inc. Any and all remedies relating to this warranty are limited to the amount of the purchase price of the product. This warranty extends only to the original purchaser, consumer or gift recipient.

This warranty does not cover failure caused by food build-up, water deposits, normal cosmetic discoloration, and inadequate maintenance of the product. This warranty will not cover damage or failure to function if the product has been dismantled or tampered with, if it has been damaged due to exposure to water or any other liquid, if it is not used in conformity with the printed directions of this product or if it has been accidentally or intentionally damaged.

This warranty does not cover the following parts which may be supplied with the appliance: plastic parts, glass parts, glass containers, ceramic containers, cutter/strainer, filters or non-stick surfaces.

This product is intended for use in a single-family household. This warranty will become null and void if the product is used for commercial purposes or any other purpose other than for single-family household use.

We exclude all claims for special, incidental and consequential damages caused by breach of any express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

TO RETURN FOR SERVICE:

1. Securely package and return the product PREPAID to:
FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4

NOTE: We recommend you insure your parcel for your protection.

2. Please enclose your name, return address, postal code, telephone number and a description of the defect.
3. To ensure prompt 'In-Warranty' service , be sure to include a proof of purchase (a copy of your store receipt).
4. For repairs not covered under warranty, you will be advised of the cost of the repair in advance, and upon receipt of your cheque or money order the repairs will be completed and the product returned to you.

If at any time you order parts or inquire about service, please quote the "MODEL NUMBER" stamped on the appliance nameplate.

For assistance regarding this appliance, please call
1-877-244-1110

between 9:00 am and 5:00 pm (EST) Monday to Friday
or write

FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4
or email:
customerservice@formulabrands.com

© General Mills. Betty Crocker and designs are trademarks of General Mills used under license.

 
REPLACEMENT PARTS



Filter



Brewing Basket

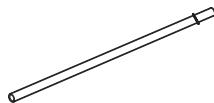


Straw



Coffee Scoop



 Silicone Seal Ring

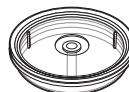

Tumbler Lid with
Silicone Ring



Tumbler



PLEASE WRITE MODEL NUMBER HERE:

PART	QTY	PRICE	TOTAL
Brewing Basket		\$12.99	
Coffee Scoop		\$0.99	
Filter		\$4.99	
Silicone Seal Ring		\$0.99	
Straw		\$0.99	
Tumbler		\$8.99	
Tumbler Lid with Silicone Ring		\$4.99	
TOTAL			
SHIPPING AND HANDLING TO CANADA:		\$9.00*	
SHIPPING AND HANDLING TO USA:		\$15.00*	
SUBTOTAL			
ADD 13% H.S.T. - CANADA ONLY			
		TOTAL	

If you would like to order replacement or spare parts for this appliance, please complete and mail this form, along with a cheque or money order made payable to:

FORMULA BRANDS INC.
Parts Department
45 Mural Street, Unit #7,
Richmond Hill, Ontario
Canada L4B 1J4

NAME _____

ADDRESS _____

CITY _____

PROVINCE/STATE _____

POSTAL/ZIP CODE _____

Prices are subject to change without notice.

PLEASE NOTE: WHEN ORDERING FROM USA, AN 'INTERNATIONAL' MONEY ORDER MUST BE USED.

* Shipping costs may vary based on fuel surcharges and postage rates. Please call toll-free 1-877-244-1110 or email customerservice@formulabrand.com to confirm shipping and handling charges.

Allow 3 to 6 weeks
for delivery.

BC-4869B
06/25