


PullRite SuperGlide Capture Plate Guide

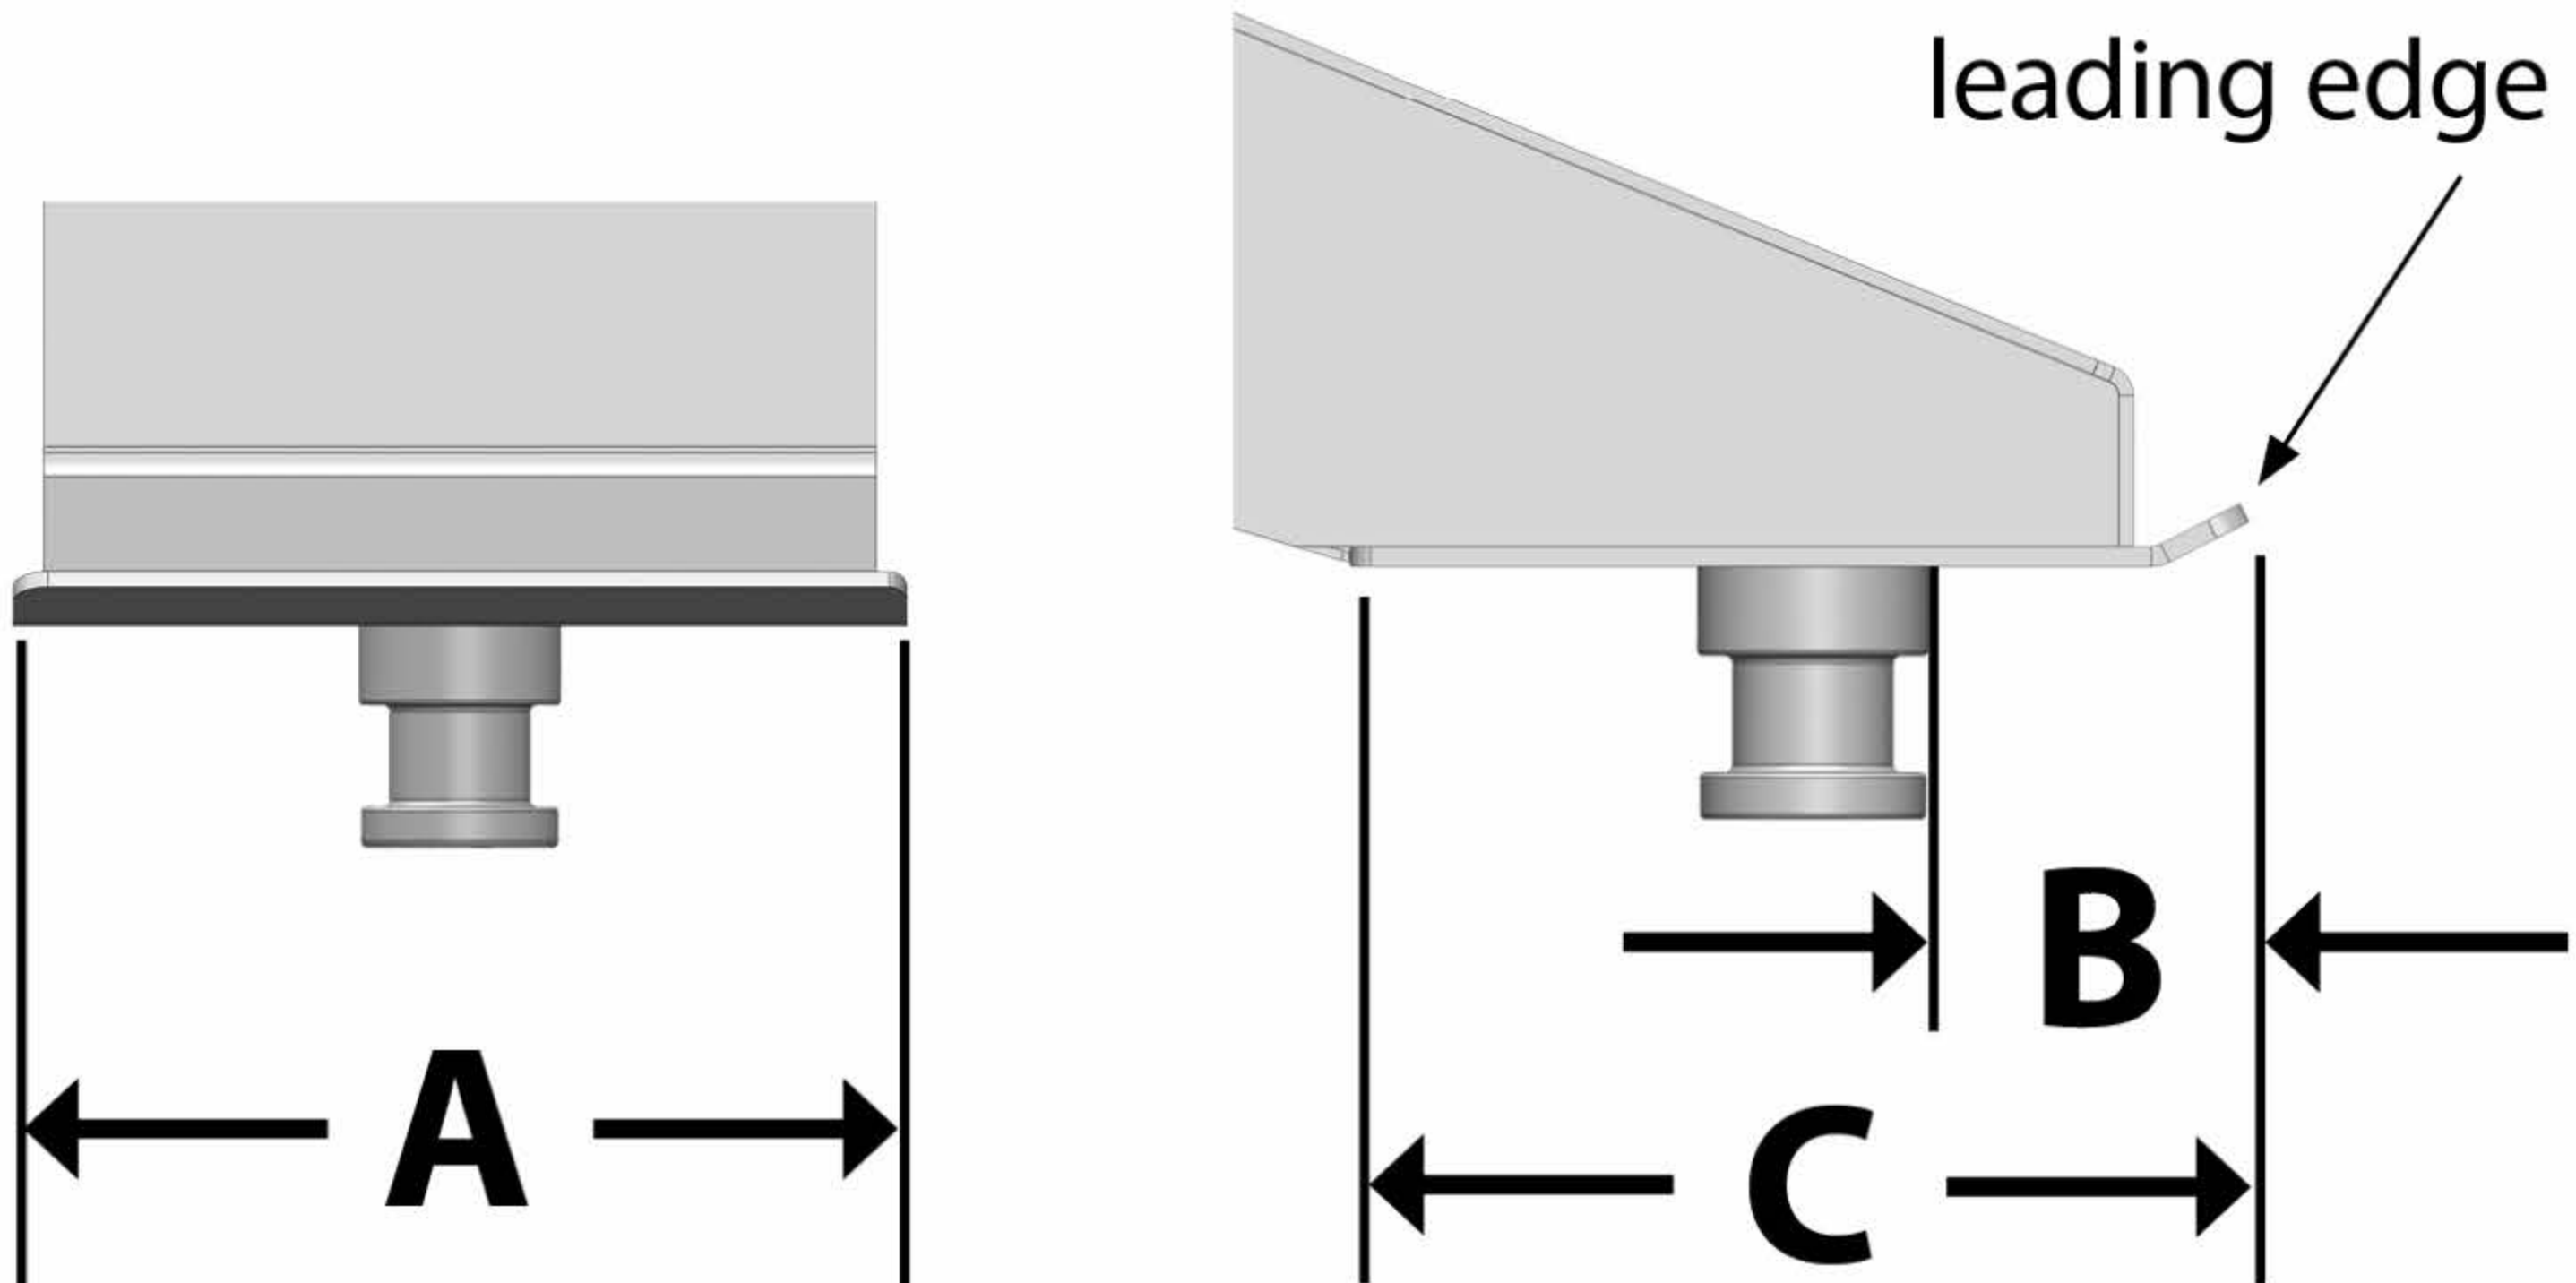

A: Measure the plate from side-to-side.

B: Measure from the leading edge of the pin to the leading edge of the plate.

C : Measure from the rear edge to the leading edge of the plate.

Pin Box Manufacturer	PullRite SKU	CW SKU	Pin Box Model	A Measurement	B Measurement	C Measurement
Lippert (Less Than 13" Wide)	331704	35729	1621	12-3/4"	3-3/8"	8-7/8"
Lippert (Greater Than 13" Wide, Long)	331705	35730	1621	13-1/4"	3-3/8"	8-7/8"
Lippert (Greater Than 13" Wide, Long)	331705	35730	1116	13-1/4"	3-1/2"	9-3/16"
Lippert (Greater Than 13" Wide, Medium)	331705	35730	1716	13-1/4"	3-1/4"	8-7/8"
Lippert	331723	121269	Rhino	7-3/8"	2-5/16"	7-3/4"
Lippert	331725	157421	Helux	13-3/16"	6-3/4"	11-13/16"
MOR/ryde	331707	37636	Rubber Cushion	13-1/2"	7-5/16"	17-1/2"
Trailair	331760	80292	Rota-Flex/Road Armor	11-7/8"	5"	11-5/16"
Gen-Y	331726	157422	Executive	12"	4"	10-15/16"
Reese	331722	86251	Revolution (16K & 21K)	13" or 12-1/2"	4-1/4"	11-3/4"
Multi-Fit	3365	50598	-	12-3/4" - 13-1/2" and 14"	2-9/16" - 4"	All